




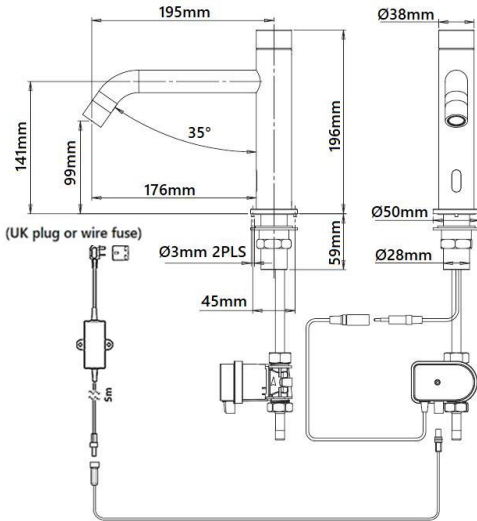
Acme Sanitary Ware Co Ltd


Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong
 Tel: 2388 7171 Fax: 2710 8012
 E-mail: acme@acmesanitary.com.hk
 Website: www.acmesanitaryware.com.hk





PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	


SANITARY WARE SPECIFICATION SHEET


Item Descriptions	Stern (Israel) "Extreme HL" Chrome plated long spout deck mounted sensor faucet in IP67 Dual power input box with AC Supply with 5m wire AC 110-240 Vac 50/60Hz to 9V 0.3A IP68 waterproof switching transformers	<div>Illustration/ Drawing</div> 		
Dimensions	L195 x W50 x H196 mm			
Model	Extreme HLE			
Code Number	237316			
Finish	Chrome Plated			
Supplier	Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen (852) 2388-7171 / (852) 2710-8012 acme@acmesanitary.com.hk www.acmesanitary.com.hk			
Contact Tel/Fax				
E-mail				
Website				
EXTREME HLE Ref # 237316 Touch-free electronic faucet for deck-mounted installations. Activated by infrared sensor. Long spout version. Shorter body diameter. For cold or premixed water. Filters included. Chrome plated body, other finishes available. Includes a low battery indicator. Latching solenoid valve is located above deck inside the product for added vandal protection. Featuring a Dual Power system with backup battery in case of power failure. Regular faucet installation with simple transformer connection. Adjustable settings by remote control: sensor range, security time, delay in, delay out, on-off and reset to factory settings. 24 hour mandatory hygiene flush available upon request.				
Application: Deck-mounted faucet. Combining an elegant minimalist design with anti-vandal features. Easy installation. Long lasting even in the harshest installation sites. Helps washrooms stay clean and saves water. Prevents cross contamination. Ideal for stadiums, train and bus stations and highway rest stops.				
Use: Touch-free electronic faucet. The faucet is automatically activated when users place their hands in the sensor range and stops when the users remove their hands.				
PRODUCT AT A GLANCE				
Installation	Lavatory mounted			
Power Supply	•IP67 Dual power Input box with a 9V battery or 9V transformer			
Operating pressure	0.5-8.0 bar / 7.0-116.0 PSI			
Water supply	Cold and premixed water			
Water flow	6 LPM / 1.58 GPM - SSR PCA stream			
Water Saving Options	4 LPM / 1 GPM ; 3 LPM / 0.8 GPM 1.89 LPM / 0.5 GPM ; 1.3 LPM 0.35 GPM - PCA spray			
Water temperature	70°C Maximum			
Security Time	90 seconds. Adjustable by remote control			
ORDERING INFORMATION				
MODEL	CODE	POWER	OPTION	CODE
EXTREME HLB	237317	IP67 Dual power input box with a 9V battery	Remote control	07100005
			Matching battery-powered soap dispenser	235920
EXTREME HLE	237316	IP67 Dual power input box with a 9V transformer	Matching transformer-powered soap dispenser combination	235900


**Installation:**
Lavatory mounted


**Water supply:**
Hot & Cold (2 inlets)

**Water temperature:**
Max 70 °C

**Operating pressure:**
0.5 - 8.0 bar

**Power source:**
9V transformer

**Stern Soap & Water:**
Extreme matching soap dispenser

**Lead free:**
Extreme HLE LF

* All information of the above is for the reference only. No prior notice is made if any changes.




Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong
Tel: 2388 7171 Fax: 2710 8012
E-mail: acme@acmesanitary.com.hk
Website: www.acmesanitaryware.com.hk

stern

PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

SPARE PARTS LIST

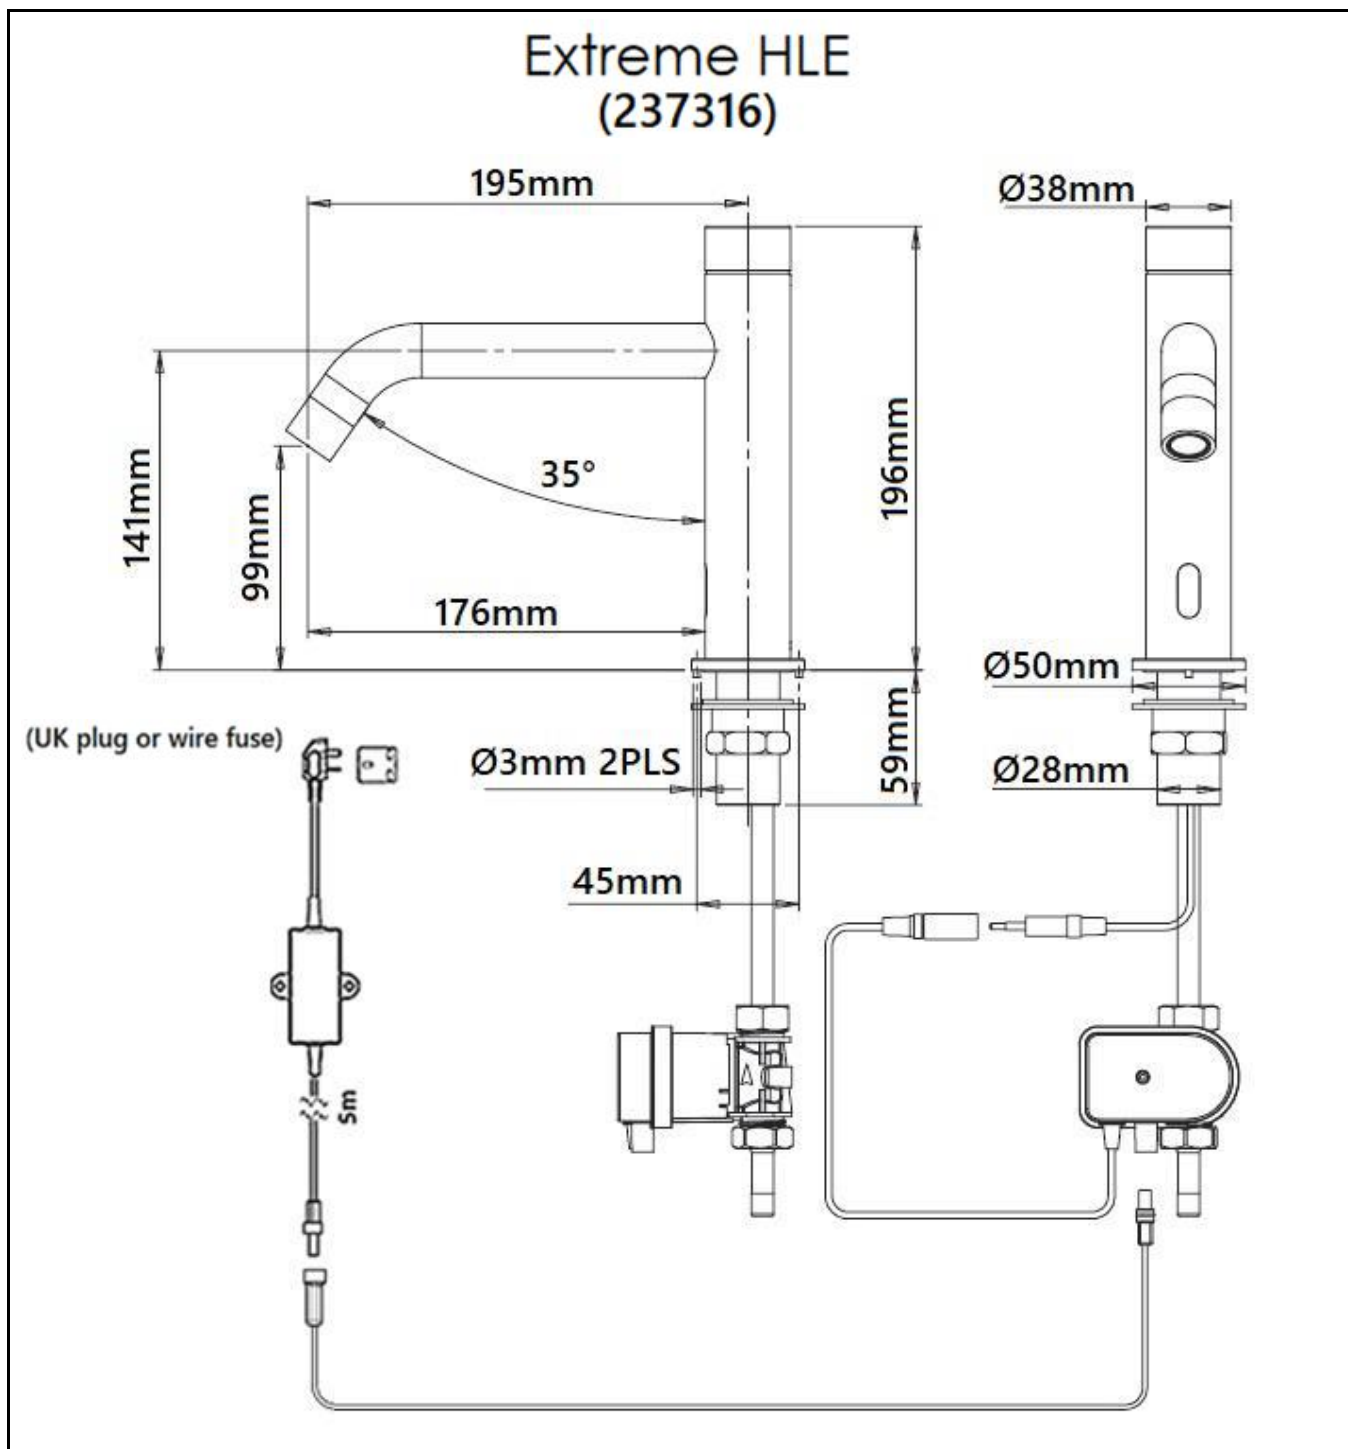

Note: In order to locate the relevant spare part, please check the corresponding parts and part number in the drawing. Minimum order quantity will be required.

** All information of the above is for the reference only. No prior notice is made if any changes.*



INSTALLATION

STEP 1 – PREPARATION FOR MOUNTING THE FAUCET

1


Shut off the water supply.



2 INLETS VERSION

2

Remove the hexagonal nut, the disk and the gasket. Do not remove the O-ring from the base of the faucet.

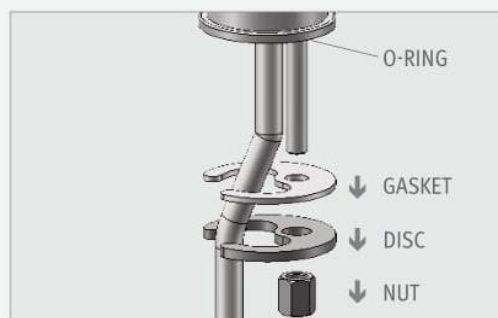

STEP 2 – INSTALLING THE FAUCET


1

Place the faucet with O-ring into the hole in deck or lavatory. Make sure the O-ring is located between the deck or lavatory and the bottom of the faucet.



2

Slide the gasket, disk and hexagonal nut over the flexible hose and secure the faucet into place.

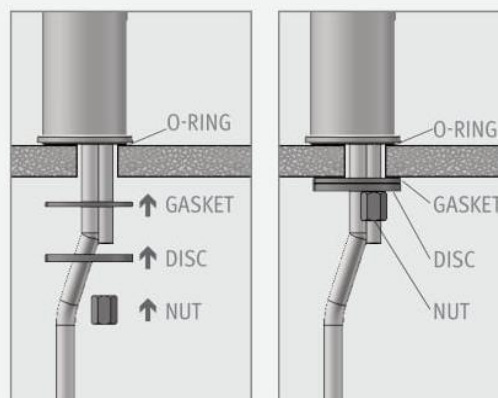



Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong
Tel: 2388 7171 Fax: 2710 8012
E-mail: acme@acmesanitary.com.hk
Website: www.acmesanitaryware.com.hk

stern

INSTALLATION

STEP 3 – CONNECTING THE WATER SUPPLY

1

Connect the red flexible pipe to the hot water supply and the blue flexible pipe to the cold water supply.



2 INLETS VERSION

MAKE SURE THAT THE FILTERS ARE INSTALLED BETWEEN THE FLEXIBLE PIPE AND THE SHUT OFF VALVE/ANGLE VALVE (NOT SUPPLIED).

2

Turn on the central water supply and the shut-off valves (angle valves). Check for leaks.




STEP 4 – CONNECTING THE POWER SOURCE

BATTERY VERSION

Install the batteries in the battery box and attach the box to the wall underneath the sink.

The cable connection must point down. (You can use an optional extension cable in order to assemble the battery box up to 3 meters away from the sink.)

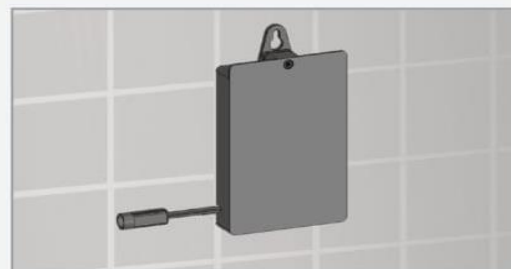

TRANSFORMER VERSION

Plug the transformer into the electricity socket and connect the connectors.





Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong

Tel: 2388 7171 Fax: 2710 8012

E-mail: acme@acmesanitary.com.hk

Website: www.acmesanitaryware.com.hk



TROUBLESHOOTING

PROBLEM	INDICATOR	CAUSE	SOLUTION
No water coming out of the faucet:	1. Sensor flashes continuously when user's hands are within the sensor's range.	Low battery.	Replace battery
	2. LED in the sensor does not flash once when user's hands are within the sensor's range.	1. Range is too short.	Increase the range
		2. Range is too long.	Decrease the range
		3. Battery is completely used up	The battery must be replaced.
		4. Unit is in "Security Mode"*	
		5. Sensor is picking up reflections from the washbasin or another object.	Eliminate cause of reflection.
	3. LED in the sensor flashes once when user's hands are within the sensor's range.	1. Connectors between the electronic unit and solenoid are disconnected.	Connect the electronic unit connectors to the solenoid. Solenoid is located inside the body.
		2. The water supply pressure is higher than 8 bar.	Reduce the supply water pressure.
		3. The water supply pressure is under 8 bars and yet the pressure in the faucet's body is higher. This situation could be caused by a sudden increase in the water supply pressure that the back check prevents from dropping, even after water supply pressure drops under 8 bars.	Shut off water supply and unscrew one of the flexible pipes in order to reduce the pressure that blocks the product.
Water flow from spout does not stop:	1. Sensor flashes once when user's hands are within the sensor's range.	Debris or scale in solenoid	Clean or replace the solenoid.
	2. LED in the sensor does not flash once when user's hands are within the sensor's range.	1. Sensor is dirty or covered.**	Clean or eliminate cause of interference.
		2. Sensor is picking up reflections from the washbasin or another object.	Decrease the range or eliminate cause of reflection.
Water flow diminished		Filter or aerator is clogged or the solenoid is dirty.	Remove, clean, re-install

* "Security Mode": If the sensor is covered for more than 90 sec. the faucet will automatically shut off water flow. In order to return to normal operation, remove any blockage.

** In this case, the water flow will stop anyway after 90 seconds because of the security time.