



# Acme Sanitary Ware Co. Ltd.

1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong

Tel: 2388 7171 Fax: 2710 8012

Email: acme@acmesanitary.com.hk

Website: www.acmesanitary.com.hk

Since 1949

PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

## SANITARY WARE SPECIFICATION SHEET

<p><b>Item Descriptions</b></p> <p><b>Model</b></p> <p><b>Material/ Finish</b></p> <p><b>Manufacturer</b></p> <p><b>Supplier</b></p> <p><b>Contact Tel/Fax</b></p> <p><b>E-mail</b></p> <p><b>Website</b></p>	<p>Bobrick (USA) Surface mounted foam soap cartridge dispenser 500ml</p> <p>B-26627</p> <p>Stainless Steel/ Satin</p> <p>Bobrick Washroom Equipment Inc. (USA)</p> <p>Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen (852) 2388-7171 / (852) 2710-8012 acme@acmesanitary.com.hk www.acmesanitary.com.hk</p>	<p style="text-align: center;"><b>Illustration/ Drawing</b></p> <div style="text-align: right;"> </div>
<p><b>MATERIAL:</b> Welded, 0.8mm (22 gauge) 1.4301, Typ CrNi 18/10, AISI 304 stainless steel housing with satin finish; stainless steel operating lever; metal lock and key; soap level indicator; interchangeable plastic containers with plastic pumps; variety of plastic containers available including containers with pumps for soap or foam.</p> <p><b>OPERATION:</b> The cover is lockable with a Bobrick System lock. To refill the dispenser, open the cover by lifting and pulling for ward. The soap level indicator shows how much product is remaining in the dispenser. The plastic container can be removed and re-installed for quick and easy refilling of up to 500 ml of bulk foam soap. Alternatively, soap can be poured directly into the plastic container. The dispenser has been designed for quick and easy refilling process.</p> <p><b>INSTALLATION:</b> After opening the dispenser cover, remove the plastic container, gently lifting it upwards while pressing the locking latch. Mount the dispenser to the wall by using the enclosed screws and wall plugs. Make sure the wall surface is in good condition to ensure proper mating of the dispenser to the wall. Use silicone or glue pads if necessary.</p> <p><b>Note:</b></p> <ol style="list-style-type: none"> <li>The dispenser should be installed near or directly above the sink to allow wet hands to drip into the sink.</li> <li>Allow sufficient space above dispenser to exchange cartridges easily.</li> <li>Recommended installation height: 100 – 110 cm (39" - 43")(measured from floor to the bottom of the dispenser).</li> </ol> <p><b>TECHNICAL SPECIFICATIONS:</b> Model B-26627 from Bobrick Washroom Equipment, Dispenser made of 0.8 mm thick, (22 gauge) 1.4301, Type CrNi 18/10, AISI 304 stainless steel with a brushed, satin finish; plastic container for soap cartridges (up to 500 ml), as well as for bulk refill of soap (up to 500 ml); lockable with a Bobrick System lock; soap level indicator.</p> <p><b>CARE INSTRUCTIONS:</b> Clean regularly with warm water and/or stainless steel cleaner. Do not use acid (chloride) cleaners or scouring agents. The suction valve can be cleansed by pumping hot water through it. Do not dismantle the dispenser.</p>		

\* All information of the above is for the reference only. No prior notice is made if any changes.



# Acme Sanitary Ware Co. Ltd.

1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong

Tel: 2388 7171 Fax: 2710 8012

Email: acme@acmesanitary.com.hk

Since 1949


Website: www.acmesanitary.com.hk

PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	


## INSTALLATION INSTRUCTIONS

### BOBRICK SURFACE-MOUNTED FOAM SOAP BULK-FILL DISPENSER


1. Install dispenser near or directly above sink to allow wet hands to drip into sink.
2. Allow sufficient space above dispenser to exchange cartridges or refill from bottle easily.
3. Recommended installation height: 100 – 110 cm (39" - 43") (measured from floor to bottom of dispenser).
4. For installation please follow instructions down below:

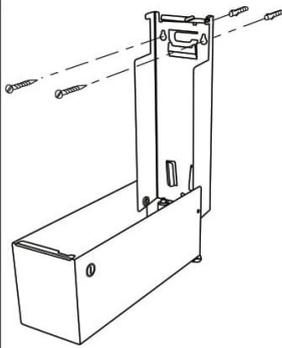


1. Mount dispenser to wall using enclosed screws and wall plugs.

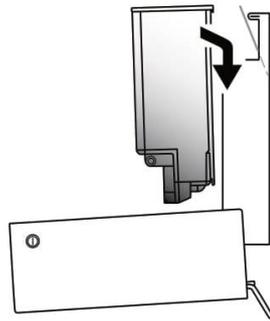


2. Insert plastic container into dispenser.

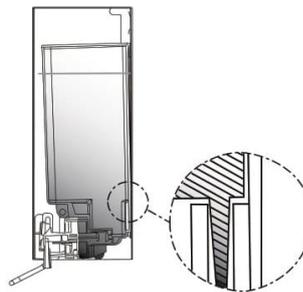


3. Ensure both top and bottom of container are correctly seated in dispenser.

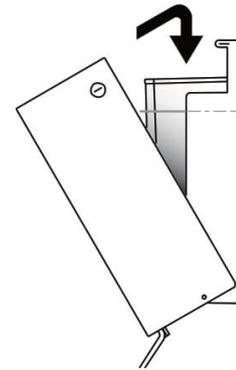


4. Replace dispenser cover.

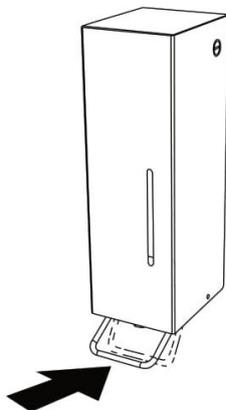

5. Press lever several times to prime pump.

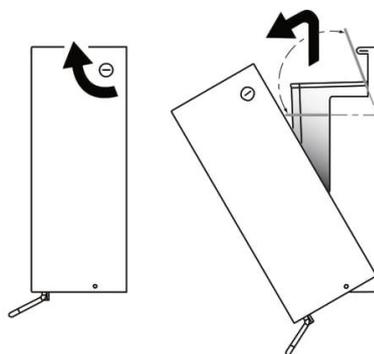

A. To change cartridge: open dispenser.

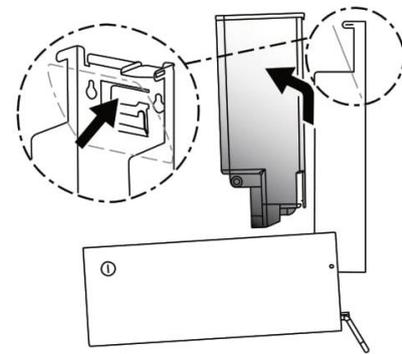

B. Press locking latch and lift cartridge up and out.