





PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

## SANITARY WARE SPECIFICATION SHEET

Item Descriptions	Stern (Israel) Remote control for liquid soap dispenser	Illustration/ Drawing
Dimensions	L36 x W10 x H55 mm	
Model	Remote Control for Liquid Soap Dispensor	
Code Number	07100008	
Supplier	Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen	
Contact Tel/Fax	(852) 2388-7171 / (852) 2710-8012	
E-mail	acme@acmesanitary.com.hk	
Website	www.acmesanitary.com.hk	
<p><b>REMOTE CONTROL FOR SOAP DISPENSER</b> <b>Ref # 07100008</b> IR remote control for Stern's soap dispensers. Allows changing the following soap dispenser settings: soap quantity, coming back to soap quantity factory settings, temporary off function and refill the soap tank.</p> <p><b>Application:</b> Allows changing the soap dispensers sensor settings according to specific projects needs. Helps to maintain extensive installations easily.</p> <p><b>Use:</b> Hold the remote control stright in front of the sensor eye at a distance of 11-15 cm (4"-6"). Press the button of the function you would like to change, wait until a red blink of the sensor eye is perceived and make the change. Attention: holding the soap dispenser remote control out of the recommended range (too close or too far) may interfere with the remote's activation.</p> <p><b>Adjustable settings:</b></p> <ul style="list-style-type: none"> <li>• Soap dosage</li> <li>• Soap tank refill</li> <li>• Temporary shutoff function</li> <li>• Reset to factory settings</li> </ul>		
		

Note: <https://www.youtube.com/watch?v=wGgDplyO82c>

\* All information of the above is for the reference only. No prior notice is made if any changes.



## REMOTE CONTROL FUNCTIONS

If you acquired the remote control together with your soap dispenser, you may adjust the dispenser settings if required. To use the remote control hold it straight in front of the sensor at a distance of about 10-15 cm (4-6").

Attention: The remote control held out of the recommended range (too close or too far) will not operate.

The remote control can be used to adjust the following functions:

### 1-SOAP QUANTITY

The 1-4 drop keys allow the user to choose the desired soap quantity. \*

① 0.7 to 0.9

② 1.2 to 1.6

③ 1.6 to 1.9

④ 2.1 to 2.3

Indication: continuous blinking of the LED in the sensor eye.

\*The exact dosage depends on soap viscosity.

### 2-ADJ

This function resets the sensor back to factory settings.

Indication: 2 blinks of the LED in the sensor eye.

### 3-TEMPORARY OFF FUNCTION

This function is ideal to perform any kind of activity in front of the sensor without operating the system (for example, cleaning). The soap dispenser will remain shut for one minute when this button is pressed once.

To cancel this function and to return to normal operation press the On/Off button again or wait for one minute.

Indication: OFF – 2 fast blinks, ON – 4 fast blinks

### 4-FILL THE SOAP TANK

Once the soap tank has been filled / re-filled, press the FILL button. The pump will run for one minute for priming the soap to the soap dispenser spout.

To stop this activity press the FILL button again. If the soap has not started coming out of the spout, press the Fill button again.

