




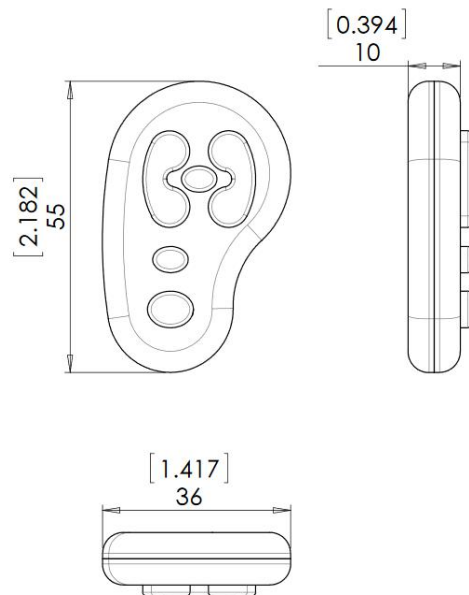

## Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong  
 Tel: 2388 7171 Fax: 2710 8012  
 E-mail: acme@acmesanitary.com.hk  
 Website: www.acmesanitaryware.com.hk



PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

## SANITARY WARE SPECIFICATION SHEET

Item Descriptions	Stern (Israel) Remote control for foam soap dispenser	Illustration/ Drawing
Dimensions	L36 x W10 x H55 mm	
Model	Remote Control for Foam Soap Dispenser	
Code Number	07100009	
Supplier	Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen	
Contact Tel/Fax	(852) 2388-7171 / (852) 2710-8012	
E-mail	acme@acmesanitary.com.hk	
Website	www.acmesanitary.com.hk	
<b>REMOTE CONTROL FOR FOAM SOAP DISPENSER</b> <b>Ref # 07100009</b> IR remote control for Stern's foam soap dispensers. Allows changing the following soap dispenser settings: soap quantity, air mix quantity, reset - back to factory soap quantity, temporary off function, refill the soap tank  <b>Application:</b> Allows changing the foam soap dispensers sensor settings according to specific projects needs. Helps to maintain extensive installations easily.  <b>Use:</b> Hold the remote control stright in front of the sensor eye at a distance of 11-15 cm (4"-6"). Press the button of the function you would like to change, wait until a red blink of the sensor eye is perceived and make the change. Attention: holding the soap dispenser remote control out of the recommended range (too close or too far) may interfere with the remote's activation.  <b>Adjustable settings:</b> <ul style="list-style-type: none"> <li>• Soap dosage</li> <li>• Air quantity</li> <li>• Temporary shutoff function</li> <li>• Soap tank refill</li> <li>• Reset to factory settings</li> </ul>		
		 <b>Stern Soap &amp; Water:</b> Stern foam soap dispensers

Note:

\* All information of the above is for the reference only. No prior notice is made if any changes.



## SETTINGS ADJUSTMENT WITH A REMOTE CONTROL

If available, the foam dispenser remote control can adjust the dispenser's settings. To use the remote control hold it in front of the sensor at a distance of 10-15cm (4-6").

Attention: The remote control will not operate out of the recommended range (too close or too far).

The remote control can be used to adjust the following functions:

### 1-SOAP QUANTITY

Press the + sign on the SOAP button to increase the soap quantity by increasing the dispensing time. Press the - button to decrease it.

Indication: continuous blinking blue light in the sensor eye.

### 2-AIR QUANTITY

To improve soap consistency ("foamability") change the amount air to be mixed. Press the + sign on the AIR button to increase the air quantity and the - to decrease it.

Indication: 2 blinks of the blue light in the sensor eye.

### 3-RES

This function resets the sensor back to its factory settings.

### 4-TEMPORARY OFF FUNCTION

This function temporary disables the dispenser. Use this function to preform maintenance in front of the sensor without activating the system (for example: cleaning). The soap dispenser will shut off for one minute after this button is pressed once.

To return to normal operation before the minute is over, press the On/Off button again.

### 5-FILL THE SOAP TANK

Once the soap tank has been filled \ refilled, press the FILL button. The pump will run for one minute, priming the piping with soap.

Once soap begins dispensing from the spout, priming is complete. press the FILL button again to stop the priming before the minute is over.

Indication: continuous solid blue light in the sensor eye.

