

Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

## SANITARY WARE SPECIFICATION SHEET

Item Descriptions Stern (Israel) "Smart" Chrome plated deck mounted sensor faucet in AC Supply with 5m wire AC 110-240 Vac 50/60Hz to 9V 0.3A IP68 waterproof switching transformers L60 x W44 x H142 mm Dimensions Model Smart E Code Number 235200 Finish Chrome Plated Supplier Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen Contact Tel/Fax (852) 2388-7171 / (852) 2710-8012 E-mail acme@acmesanitary.com.hk Website www.acmesanitary.com.hk

### SMART E Ref # 235200

Touch-free electronic faucet for deck-mounted installations. Activated by an infrared sensor. For cold or premixed water. Filters included. Chrome plated body, other finishes available. Includes a low battery indicator. Latching solenoid valve is located above deck inside the product for added vandal protection. Regular faucet installation with simple transformer connection. Adjustable setting by remote control: sensor range, security time, delay in, delay out, on-off and reset to factory settings. 24 hour mandatory hygiene flush available upon request.


#### Application:

Deck-mounted faucets. Combining an elegant minimalist design with anti-vandal features. Easy installation. Long lasting even in the harshest installation sites. Helps washrooms stay clean and saves water. Prevents cross contamination. Ideal for stadiums, train and bus stations and highway rest stops.

#### Use:

Touch-free electronic faucet. The faucet is automatically activated when the users place their hands in the sensor range and stops when the users remove their hands.

		PRODU	CT AT A GLANCE			
Installation		Deck-mounted				
Power Supply		9V battery    9V transformer				
Operating pressure		0.5-8.0 bAR / 7.0-116.0 PSI				
Water supply		Cold or premixed water				
Water flow		6 LPM / 1.58 GPM - SSR PCA stream				
Water Saving Options		4 LPM / 1 GPM ; 3 LPM / 0.8 GPM 1.89 LPM / 0.5 GPM ; 1.3 LPM 0.35 GPM - PCA spray				
Water temperature		70°C Maximum				
Security Time		Auto shutoff after 90 seconds. adjustable by remote control				
ORDER	ING INFORM	ATION	OPTIONS			
MODEL	CODE	POWER	OPTION	CODE		
		9V battery	Remote control	07100005		
SMART B	235100		9V battery Matching battery-powered soap dispenser		235920	
		9V transformer	Matching transformer-powered soap dispenser combination	235900		
SMART E	235200		Lead free versions	Upon request		

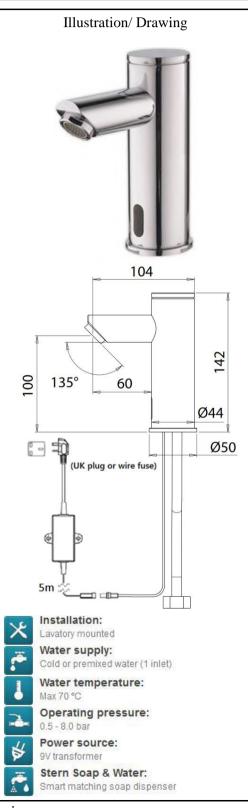


<sup>\*</sup> All information of the above is for the reference only. No prior notice is made if any changes.

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



## **SPARE PARTS LIST**

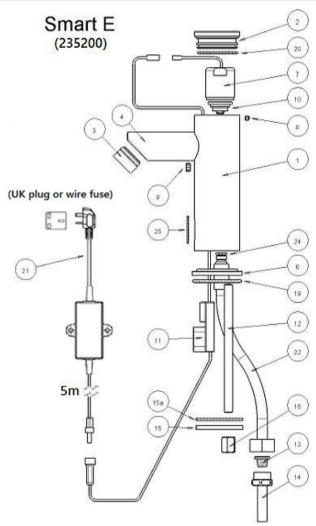

Quantity	Part Number	Description	Cat. No.
	-	Seals and Screws Kit	07210007
1	20	O-ring	
1	19	O-ring .	
1	15a	Gasket	
1	8	Screw	
1	9 25	Screw	
	20	O-ring	07000404
	-	Sensor Kit	07220184
		I-f D-10	
1	11	Infra Red Sensor	
1	25	O-ring	
	-	Filter Adapter Kit	07212001
1	13	Filter	
1	14	Nipple	
	-	Cover Kit	07270003
1	2	Cover	
1	20	O-ring	
	-	Solenoid Valve Kit	07230003
1	7	Solenoid valve	
1	10	Diaphragm	
	10	Diaphragm	04500001
	21	Transformer	TBC

Note: In order to locate the relevant spare part, please check the corresponding parts and part mumber in the drawing. Minimum order quantity will be required.

<sup>\*</sup> All information of the above is for the reference only. No prior notice is made if any changes.



Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



## **INSTALLATION**

### STEP 1 - PREPARATION FOR MOUNTING THE FAUCET

1 Shut off the water supply.




Remove the hexagonal nut, the disk and the gasket. Do not remove the O-ring from the base of the faucet.





### STEP 2 - INSTALLING THE FAUCET

Place the faucet with O-ring into the hole in deck or lavatory. Make sure the O-ring is located between the deck or lavatory and the bottom of the faucet.

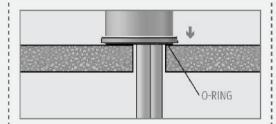

Slide the gasket, disk and hexagonal nut over the flexible hose and secure the faucet into place.

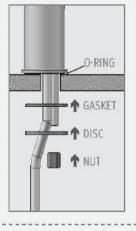

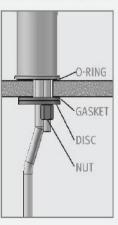



Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



## **INSTALLATION**

### STEP 3 - CONNECTING THE WATER SUPPLY

Connect the flexible pipe to the water supply.

For models with temperature control connect the red flexible pipe to the hot water supply and the blue flexible pipe to the cold water supply.





MAKE SURE THAT THE FILTER(S) IS/ARE INSTALLED BETWEEN THE FLEXIBLE PIPE AND THE SHUT OFF VALVE (ANGLE VALVE) (NOT SUPPLIED).

(2)

Turn on the central water supply and the shut-off valves (angle valves) and check for leaks.







Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



## **INSTALLATION**

### STEP 4 - CONNECTING THE POWER SOURCE

#### **BATTERY VERSION**

Install the battery box at the wall underneath the sink using the two sided adhesive foam tape. The cable connection must point down. (You can use an optional extension cable in order to assemble the battery box up to 10ft. away from the sink.)



#### TRANSFORMER VERSION

Plug the transformer into the electricity socket and connect the connectors.





In order to avoid entering into the adjusting mode, wait 10 seconds before operating the faucet. If the range is unsatisfactory, refer to the section titled "settings adjustment.



NOTE: This model includes a special aerator that allows you to adjust the water stream direction on site in order to prevent water splashing if needed. To change the angle of the water stream, simply move the adjustable tilting plate by pressing it smoothly.

ATTENTION! the aerator is tightened to prevent removal by hand.





Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



# **TROUBLESHOOTING**

PROBLEM INDICATOR		CAUSE	SOLUTION	
No water coming out of the faucet:	1. Sensor flashes continuously when user's hands are within the sensor's range.	Low battery.	Replace battery	
	2. LED in the sensor does not flash once when user's hands are within the sensor's range.  3. LED in the sensor flashes	2. Range is too long.	Increase the range Decrease the range The battery must be replaced. Eliminate cause of reflection. Connect the electronic unit	
	once when user's hands are within the sensor's range.	2. Debris or scale in solenoid.	Unscrew solenoid, pull out the plunger and the spring from the solenoid and clean them. Use scale remover material if needed. When replacing the plunger, please make sure that the spring is in vertical positio	
		<ol> <li>The central orifice in the diaphragm is plugged or the diaphragm is torn</li> <li>The water supply pressure is higher than 8 bar.</li> <li>The water supply pressure is under 8 bars and yet the pressure in the faucet's body is higher. This situation could be caused by a sudden increase in the water supply pressure that the back check prevents from dropping, even after water supply pressure drops under 8 bars.</li> </ol>	Clean the orifice or replace diaphragm. Reduce the supply water pressure.  Shut off water supply and unscrew one of the flexible pipes in order to reduce the pressure that blocks the product.	
Water flow from spout does not stop:	1. Sensor flashes once when user's hands are within the sensor's range.	Debris or scale in diaphragm	Clean the orifice or replace diaphragm.	
	2. LED in the sensor does not flash once when user's hands are within the sensor's range.		Clean or eliminate case of interference. Decrease the range or eliminat cause of reflection.	
Water flow diminished		Filter or aerator is clogged	Remove, clean, re-install	

<sup>\* &</sup>quot;Security Mode": If the sensor is covered for more than 90 sec. the faucet will automatically shut off water flow. To return to normal operation remove any blockage.

<sup>\*\*</sup> In this case, the water flow will stop anyway after 90 seconds because of the security time.