




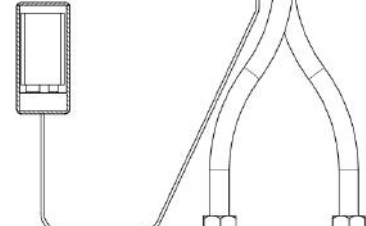
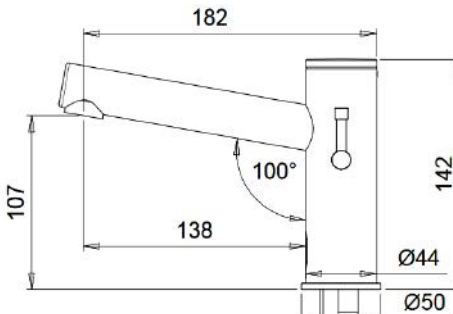






## Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong  
 Tel: 2388 7171 Fax: 2710 8012  
 E-mail: acme@acmesanitary.com.hk  
 Website: www.acmesanitaryware.com.hk



PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	
 
## SANITARY WARE SPECIFICATION SHEET


Item Descriptions	Stern (Israel) "Elite 1000 L" Chrome plated long spout deck mounted sensor mixer with adjustable temperature limiter in 9V DC Supply with <b>IP67 waterproof battery box</b>	Illustration/ Drawing																																
Dimensions	L138 x W50 x H142 mm																																	
Model	Elite 1000 LB																																	
Code Number	236550																																	
Finish	Chrome Plated																																	
Supplier	Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen																																	
Contact Tel/Fax	(852) 2388-7171 / (852) 2710-8012																																	
E-mail	acme@acmesanitary.com.hk																																	
Website	www.acmesanitary.com.hk																																	
<b>ELITE 1000 LB Ref # 236550</b> Touch-free electronic faucet for deck-mounted installations. Activated by an infrared sensor. Long spout version. For hot and cold water. With mixer for temperature adjustment. Filters included. Chrome plated body, other finishes available. Latching solenoid valve is located above deck inside the product for added vandal protection. Regular faucet Installation with a simple battery connection. Adjustable setting by remote control: sensor range, security time, delay in, delay out, on-off and reset to factory setting. 24 hours mandatory hygiene flush available upon request.																																		
<b>Application:</b> Deck-mounted faucet. Combining an elegant minimalist design with anti-vandal features. Easy installation. Long lasting even in the harshest installation sites. Helps washrooms stay clean and saves water. Prevents cross contamination. Ideal for stadiums, train and bus stations and highway rest stops.																																		
<b>Use:</b> Touch-free electronic faucet. The faucet is automatically activated when the users place their hands in the sensor range and stops when the users remove their hands.																																		
<table><tr><th colspan="4">PRODUCT AT A GLANCE</th></tr><tr><td>Installation</td><td colspan="3">Lavatory mounted</td></tr><tr><td>Power Supply</td><td colspan="3">• 9V external battery box • IP67 Battery Box for 6 AA 1.5V alkaline batteries • 9V Transformer • IP 68 Encapsulated 9V transformer</td></tr><tr><td>Operating pressure</td><td colspan="3">0.5-8.0 bar / 7.0-116.0 PSI</td></tr><tr><td>Water supply</td><td colspan="3">Hot and cold water</td></tr><tr><td>Water flow</td><td colspan="3">2 lpm / 0.5 gpm</td></tr><tr><td>Water temperature</td><td colspan="3">70°C Maximum</td></tr><tr><td>Security Time</td><td colspan="3">90 seconds. Adjustable by remote control</td></tr></table>			PRODUCT AT A GLANCE				Installation	Lavatory mounted			Power Supply	• 9V external battery box • IP67 Battery Box for 6 AA 1.5V alkaline batteries • 9V Transformer • IP 68 Encapsulated 9V transformer			Operating pressure	0.5-8.0 bar / 7.0-116.0 PSI			Water supply	Hot and cold water			Water flow	2 lpm / 0.5 gpm			Water temperature	70°C Maximum			Security Time	90 seconds. Adjustable by remote control		
PRODUCT AT A GLANCE																																		
Installation	Lavatory mounted																																	
Power Supply	• 9V external battery box • IP67 Battery Box for 6 AA 1.5V alkaline batteries • 9V Transformer • IP 68 Encapsulated 9V transformer																																	
Operating pressure	0.5-8.0 bar / 7.0-116.0 PSI																																	
Water supply	Hot and cold water																																	
Water flow	2 lpm / 0.5 gpm																																	
Water temperature	70°C Maximum																																	
Security Time	90 seconds. Adjustable by remote control																																	
<table><tr><th colspan="4">ORDERING INFORMATION</th></tr><tr><th>MODEL</th><th>CODE</th><th>POWER</th><th>ADDITIONAL SPECIFICATIONS</th></tr><tr><td>ELITE 1000 B</td><td>236700</td><td>9V battery</td><td rowspan="2">With mixer for water temperature adjustment</td></tr><tr><td>ELITE 1000 E</td><td>236800</td><td>9V transformer</td></tr><tr><td>ELITE 1000 LB</td><td>236550</td><td>9V battery</td><td>Long spout length 138mm \ 5.44"</td></tr><tr><td>ELITE 1000 LE</td><td>236650</td><td>9V transformer</td><td>With mixer for water temperature adjustment</td></tr><tr><td>ELITE 1000 PLUS B</td><td>236750</td><td>9V battery</td><td>Tall body 338mm \ 13.30" for counter top wash basins</td></tr><tr><td>ELITE 1000 PLUS E</td><td>236850</td><td>9V transformer</td><td>With mixer for water temperature adjustment</td></tr></table>			ORDERING INFORMATION				MODEL	CODE	POWER	ADDITIONAL SPECIFICATIONS	ELITE 1000 B	236700	9V battery	With mixer for water temperature adjustment	ELITE 1000 E	236800	9V transformer	ELITE 1000 LB	236550	9V battery	Long spout length 138mm \ 5.44"	ELITE 1000 LE	236650	9V transformer	With mixer for water temperature adjustment	ELITE 1000 PLUS B	236750	9V battery	Tall body 338mm \ 13.30" for counter top wash basins	ELITE 1000 PLUS E	236850	9V transformer	With mixer for water temperature adjustment	
ORDERING INFORMATION																																		
MODEL	CODE	POWER	ADDITIONAL SPECIFICATIONS																															
ELITE 1000 B	236700	9V battery	With mixer for water temperature adjustment																															
ELITE 1000 E	236800	9V transformer																																
ELITE 1000 LB	236550	9V battery	Long spout length 138mm \ 5.44"																															
ELITE 1000 LE	236650	9V transformer	With mixer for water temperature adjustment																															
ELITE 1000 PLUS B	236750	9V battery	Tall body 338mm \ 13.30" for counter top wash basins																															
ELITE 1000 PLUS E	236850	9V transformer	With mixer for water temperature adjustment																															
		<div></div> <div><div><b>Installation:</b> Lavatory mounted</div><div><b>Water supply:</b> Hot &amp; Cold (2 inlets)</div><div><b>Water temperature:</b> Max 70 °C</div><div><b>Operating pressure:</b> 0.5 - 8.0 bar</div><div><b>Power source:</b> 9V Alkaline battery</div><div><b>Stern Soap &amp; Water:</b> Elite matching soap dispenser</div></div>																																

\* All information of the above is for the reference only. No prior notice is made if any changes.



## SPARE PARTS LIST

**ELITE 1000LB  
(236550)**

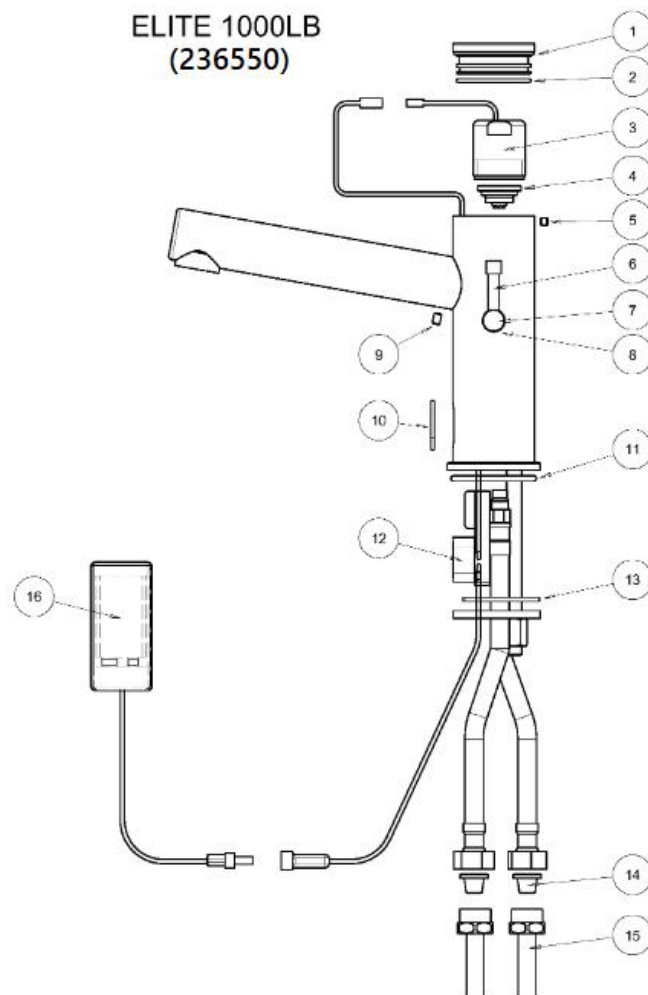

Quantity	Part Number	Description	Cat. No.
	-	<b>Seals and Screws Kit</b>	<b>07210007</b>
1	2	O-ring	
1	11	O-ring	
1	10	O-ring	
1	12	Gasket	
1	5	Screw	
1	9	Screw	
	-	<b>Sensor Kit</b>	<b>07220184</b>
1	12	Infra Red Sensor	08002253
1	10	O-ring	04510193
	-	<b>Filter Adapter Kit</b>	<b>07212001</b>
1	13	Filter	08530014
1	14	Nipple	07025095
	-	<b>Cover Kit</b>	<b>07270003</b>
1	1	Cover	
1	2	O-ring	
	-	<b>Solenoid Valve Kit</b>	<b>07230003</b>
1	3	Solenoid valve	
1	4	Diaphragm	
	4	<b>Diaphragm</b>	<b>04500001</b>
	-	<b>Mixer Handle kit</b>	<b>07260002</b>
1	6	Handle	
1	7	Axis	
1	8	O-ring	
	16	<b>Battery box</b>	<b>06530018</b>
	16	<b>IP 67 Battery box</b>	<b>06530019</b>

**Note:** In order to locate the relevant spare part, please check the corresponding parts and part number in the drawing. Minimum order quantity will be required.

*\* All information of the above is for the reference only. No prior notice is made if any changes.*



## INSTALLATION

### STEP 1 – PREPARATION FOR MOUNTING THE FAUCET


1

Shut off the water supply.



2


Remove the hexagonal nut, the disk and the gasket. Do not remove the O-ring from the base of the faucet.

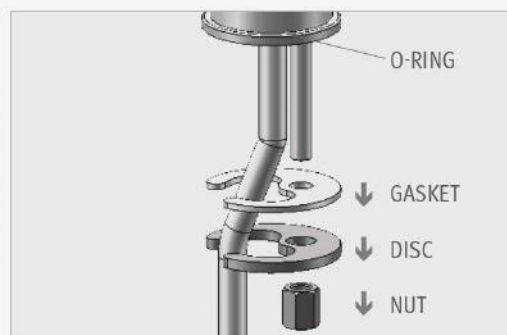

### STEP 2 – INSTALLING THE FAUCET


1

Place the faucet with O-ring into the hole in deck or lavatory. Make sure the O-ring is located between the deck or lavatory and the bottom of the faucet.

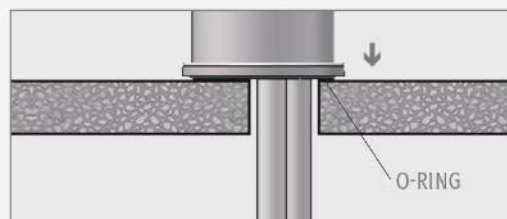

2

Slide the gasket, disk and hexagonal nut over the flexible hose and secure the faucet into place.

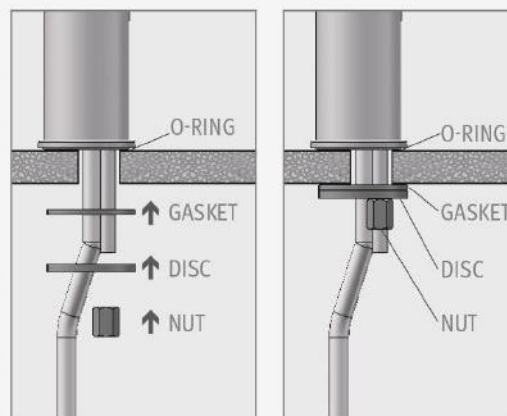



## INSTALLATION

### STEP 3 – CONNECTING THE WATER SUPPLY

1

Connect the flexible pipe to the water supply.

*For models with temperature control connect the red flexible pipe to the hot water supply and the blue flexible pipe to the cold water supply.*



2 INLETS VERSION




1 INLET VERSION

**MAKE SURE THAT THE FILTER(S) IS/ARE INSTALLED BETWEEN THE FLEXIBLE PIPE AND THE SHUT OFF VALVE (ANGLE VALVE) (NOT SUPPLIED).**

2

Turn on the central water supply and the shut-off valves (angle valves) and check for leaks.

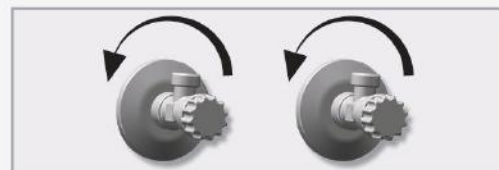






## INSTALLATION

### STEP 4 – CONNECTING THE POWER SOURCE

#### BATTERY VERSION

Install the battery box at the wall underneath the sink using the two sided adhesive foam tape. The cable connection must point down. (You can use an optional extension cable in order to assemble the battery box up to 10ft. away from the sink.)

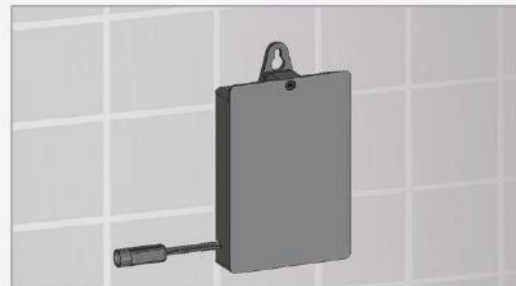

1

#### TRANSFORMER VERSION

Plug the transformer into the electricity socket and connect the connectors.



2

In order to avoid entering into the adjusting mode, wait 10 seconds before operating the faucet. If the range is unsatisfactory, refer to the section titled “settings adjustment.



ABOUT  
**10**  
SECONDS

NOTE: This model includes a special aerator that allows you to adjust the water stream direction on site in order to prevent water splashing if needed. To change the angle of the water stream, simply move the adjustable tilting plate by pressing it smoothly.

**ATTENTION!** the aerator is tightened to prevent removal by hand.





## TROUBLESHOOTING

PROBLEM	INDICATOR	CAUSE	SOLUTION
No water coming out of the faucet:	1. Sensor flashes continuously when user's hands are within the sensor's range.	Low battery.	Replace battery
	2. LED in the sensor does not flash once when user's hands are within the sensor's range.	1. Range is too short.	Increase the range
		2. Range is too long.	Decrease the range
		3. Battery is completely used up	The battery must be replaced.
		4. Unit is in "Security Mode"*	
		5. Sensor is picking up reflections from the washbasin or another object.	Eliminate cause of reflection.
	3. LED in the sensor flashes once when user's hands are within the sensor's range.	1. Connectors between the electronic unit and solenoid are disconnected.	Connect the electronic unit connectors to the solenoid.
		2. Debris or scale in solenoid.	Unscrew solenoid, pull out the plunger and the spring from the solenoid and clean them. Use scale remover material if needed. When replacing the plunger, please make sure that the spring is in vertical position.
		3. The central orifice in the diaphragm is plugged or the diaphragm is torn	Clean the orifice or replace diaphragm.
		4. The water supply pressure is higher than 8 bar.	Reduce the supply water pressure.
		5. The water supply pressure is under 8 bars and yet the pressure in the faucet's body is higher. This situation could be caused by a sudden increase in the water supply pressure that the back check prevents from dropping, even after water supply pressure drops under 8 bars.	Shut off water supply and unscrew one of the flexible pipes in order to reduce the pressure that blocks the product.
Water flow from spout does not stop:	1. Sensor flashes once when user's hands are within the sensor's range.	Debris or scale in diaphragm	Clean the orifice or replace diaphragm.
	2. LED in the sensor does not flash once when user's hands are within the sensor's range.	1. Sensor is dirty or covered.**	Clean or eliminate case of interference.
		2. Sensor is picking up reflections from the washbasin or another object.	Decrease the range or eliminate cause of reflection.
Water flow diminished		Filter or aerator is clogged	Remove, clean, re-install

\* "Security Mode": If the sensor is covered for more than 90 sec. the faucet will automatically shut off water flow. To return to normal operation remove any blockage.

\*\* In this case, the water flow will stop anyway after 90 seconds because of the security time.