

Acme Building, 22-28 Nanking Street, Kow Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

SANITARY WARE SPECIFICATION SHEET

Item Descriptions Stern (Israel) "Swan 1000" Chrome plated deck mounted sensor mixer with adjustable temperature limiter in AC Supply with 5m wire AC 110-240 Vac 50/60Hz to 9V 0.3A IP68 waterproof switching transformers Dimensions L167 x W66 x H105 mm Swan 1000 E AB 1953 Model Code Number 252420 Finish Chrome Plated Acme Sanitary Ware Co. Ltd Supplier Mr. Eric Wong/ Mr. Don Yuen Contact Tel/Fax (852) 2388-7171 / (852) 2710-8012 E-mail acme@acmesanitary.com.hk Website www.acmesanitary.com.hk

SWAN 1000 E AB 1953 Ref # 252420

Touch-free electronic faucet for deck-mounted installations. Activated by an infrared sensor. Solid brass one-piece construction. For hot and cold water, includes a mixer for water temperature adjustment. Filters included. Includes a low battery indicator. Latching solenoid valve is located above deck inside the product for added vandal protection. Solid brass one-piece construction. Adjustable settings by remote control: sensor range, security time, delay in, delay out, on-off and reset to factory settings.

Application:


Deck-mounted faucet. Combining an elegant design with anti-vandal features. Easy installation. Long lasting even in the harshest installation sites. Helps washrooms stay clean and saves water. Prevents cross contamination. Ideal for stadium, train and bus stations and highway rest stops.

Use:

Touch-free electronic faucet. The faucet is automatically activated when users place their hands in the sensor range and stops when the users remove their hands.


	PRODUCT AT A GLAI	NCE	
Installation	Deck-mounted		
Power Supply	9V battery 9V transformer		
Operating pressure	0.5-8.0 bar / 7.0-116.0 PSI		
Water supply	Hot and cold water		
Water flow	6 LPM / 1.58 GPM - SSR PCA stream		
Water Saving Options	4 LPM / 1 GPM ; 3 LPM / 0.8 GPM 1.89 LPM / 0.5 GPM ; 1.3 LPM 0.35 GPM - PCA spray		
Water temperature	70°C Maximum		
Security Time	Auto shutoff after 90 seconds, adjustal	ble by remote control	
ORDERI	NG INFORMATION	OPTIONS	

ORDERING INFORMATION			OPTION5		
MODEL	CODE	POWER	ADDITIONAL FEATURES	OPTION	CODE
SWAN 1000	252210	9V internal battery	AB 1953 Lead Free With mixer for water temperature	Remote control	07100005
SWAN 1000 B	252310	9V battery		Matching battery-powered soap dispenser	250920
SWAN 1000 E	252420	9V transformer	adjustment	Matching transformer-powered soap dispenser combination	250910

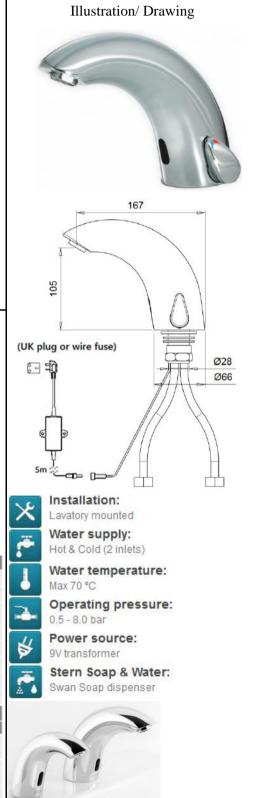


^{*} All information of the above is for the reference only. No prior notice is made if any changes.



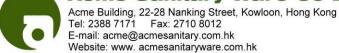



SPARE PARTS LIST

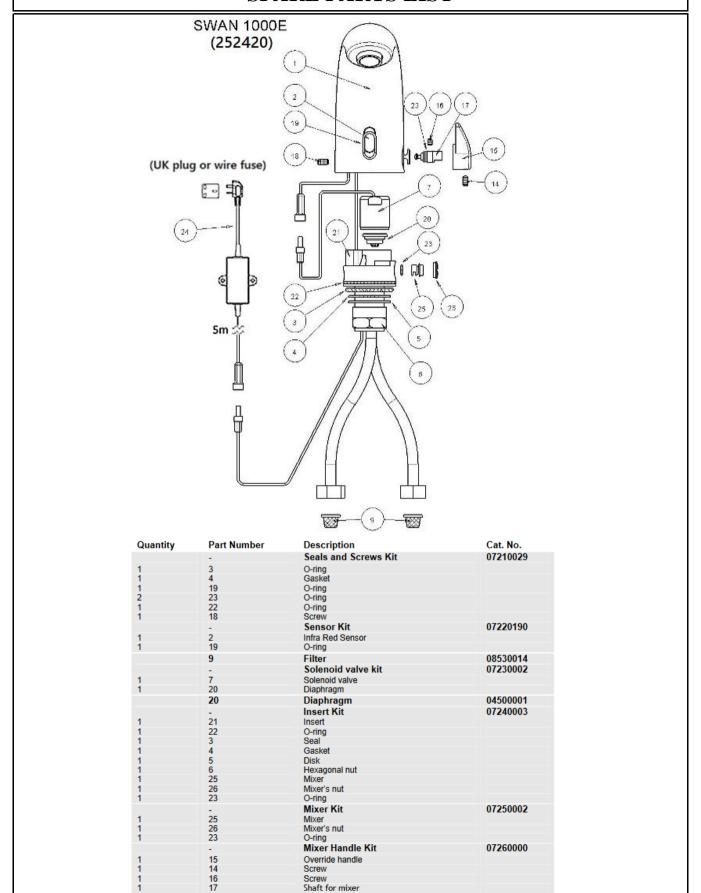

Note: In order to locate the relevant spare part, please check the corresponding parts and part mumber in the drawing. Minimum order quantity will be required.

TBC

O-Ring Transformer

^{*} All information of the above is for the reference only. No prior notice is made if any changes.



Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



FAUCET INSTALLATION

STEP 1 – PREPARATION FOR MOUNTING THE FAUCET

1) Shut off the water supply.



Remove the hexagonal nut, the disk and the gasket. Do not remove the O-ring from the base of the faucet.




STEP 2 - INSTALLING THE FAUCET

Place the faucet with O-ring into the hole in deck or lavatory. Make sure the O-ring is located between the deck or lavatory and the bottom of the faucet.



Below the deck, slide the gasket, disk and hexagonal nut over the flexible hose and secure the faucet into place.

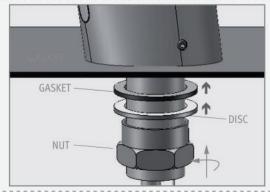

Acme Sanitary Ware Co Ltd



Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



FAUCET INSTALLATION

STEP 3 - CONNECTING THE WATER SUPPLY

Connect the flexible pipe to the water supply.

For models with temperature control connect the red flexible pipe to the hot water supply and the blue flexible pipe to the cold water supply.

Make sure the filter (s) is installed between the flexible hose (s) and the shut off valve (angle valve - not supplied).





(2)

Turn on the central water supply and the shut-off valves (angle valves) and check for leaks.



STEP 4 - CONNECTING THE POWER SOURCE

If your model is Swan 1010 \ Swan 1000: your product contains an internally mounted 9V battery. To activate it, proceed to clause # 2.

If your model is Swan 1010 B \
Swan 1000 B: install the battery
box underneath the sink with the
cable connection pointing down and
connect the connectors.



1

If your model is Swan 1010 E \ Swan 1000 E: Plug the transformer into the electricity socket and connect the connectors.



Acme Sanitary Ware Co Ltd



Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



FAUCET INSTALLATION



Remove the protective sticker from the sensor



(3)

Wait a few seconds before activating the faucet. If the range is unsatisfactory, refer to the section titled "Settings adjustment".



Acme Sanitary Ware Co Ltd



Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



TROUBLESHOOTING

PROBLEM	INDICATOR	CAUSE	SOLUTION
No water coming out of the faucet:	1. Sensor flashes continuously when user's hands are within the sensor's range.	Low battery.	Replace battery
	2. LED in the sensor does not flash once when user's hands are within the sensor's range.	 Range is too short. Range is too long. Battery is completely used up Unit is in "Security Mode"* Sensor is picking up reflections from the 	Increase the range Decrease the range The battery must be replaced.
	3. LED in the sensor flashes once when user's hands are within the sensor's range.	washbasin or another object. 1. Connectors between the electronic unit and solenoid are disconnected.	Eliminate cause of reflection. Connect the electronic unit connectors to the solenoid.
		2. Debris or scale in solenoid.	Unscrew solenoid, pull out the plunger and the spring from the solenoid and clean them. Use scale remover material if needed. When replacing the plunger, please make sure that the spring is in vertical position.
		3. The central orifice in the diaphragm is plugged or the diaphragm is torn	Clean the orifice or replace diaphragm. Reduce the supply water
		4. The water supply pressure is higher than 8 bar.	pressure.
		5. The water supply pressure is under 8 bars and yet the pressure in the faucet's body is higher. This situation could be caused by a sudden increase in the water supply pressure that the back check prevents from dropping, even after water supply pressure drops under 8 bars.	Shut off water supply and unscrew one of the flexible pipes in order to reduce the pressure that blocks the product.
Water flow from spout does not stop:	1. Sensor flashes once when user's hands are within the sensor's range.	Debris or scale in diaphragm	Clean the orifice or replace diaphragm.
	2. LED in the sensor does not flash once when user's hands are within the sensor's range.	1. Sensor is dirty or covered.**	Clean or eliminate case of interference.
		2. Sensor is picking up reflections from the washbasin or another object.	Decrease the range or eliminate cause of reflection.
Water flow diminished		Filter or aerator is clogged	Remove, clean, re-install

 $[\]star$ "Security Mode": If the sensor is covered for more than 90 sec. the faucet will automatically shut off water flow. To return to normal operation remove any blockage.

^{**} In this case, the water flow will stop anyway after 90 seconds because of the security time.