



PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

## SANITARY WARE SPECIFICATION SHEET


<p><b>Item Descriptions</b></p> <p>Stern (Israel) "Smart L" Chrome plated deck mounted long spout sensor faucet in AC Supply with 5m wire AC 110-240 Vac 50/60Hz to 9V 0.3A <b>IP68 waterproof switching transformers</b></p>	<p><b>Dimensions</b></p> <p>L90 x W44 x H142 mm</p> <p><b>Model</b></p> <p>Smart LE</p> <p><b>Code Number</b></p> <p>235210</p> <p><b>Finish</b></p> <p>Chrome Plated</p> <p><b>Supplier</b></p> <p>Acme Sanitary Ware Co. Ltd          Mr. Eric Wong/ Mr. Don Yuen</p> <p><b>Contact Tel/Fax</b></p> <p>(852) 2388-7171 / (852) 2710-8012</p> <p><b>E-mail</b></p> <p>acme@acmesanitary.com.hk</p> <p><b>Website</b></p> <p>www.acmesanitary.com.hk</p>	<p style="text-align: center;"><b>Illustration/ Drawing</b></p>			
<p><b>SMART LE Ref # 235210</b></p> <p>Touch-free electronic faucet for deck mounted installations. Activated by an infrared sensor. Long spout version. For cold or premixed water. Filters included. Chrome plated body, other finishes available. Includes a low battery indicator. Latching solenoid valve is located above deck inside the product for added vandal protection. Regular faucet installation with simple transformer connection. Adjustable setting by remote control: sensor range, security time, delay in, delay out, on-off and reset to factory settings. 24 hour mandatory hygiene flush available upon request.</p> <p><b>Application:</b></p> <p>Deck-mounted faucets. Combining an elegant minimalist design with anti-vandal features. Easy installation. Long lasting even in the harshest installation sites. Helps washrooms stay clean and saves water. Prevents cross contamination. Ideal for stadiums, train and bus stations and highway rest stops.</p> <p><b>Use:</b></p> <p>Touch-free electronic faucet. The faucet is automatically activated when the users place their hands in the sensor range and stops when the users remove their hands.</p>					
<b>PRODUCT AT A GLANCE</b>					
Installation	Lavatory mounted				
Power Supply	<ul style="list-style-type: none"> <li>• 9V external battery box</li> <li>• 9V Transformer</li> </ul>				
Operating pressure	0.5-8.0 BAR / 7.0-116 PSI For pressure over 8 bar use a pressure reducing valve.				
Water flow	6 LPM / 1.58 GPM - SSR PCA stream				
Water Saving Options	4 LPM / 1 GPM ; 3 LPM / 0.8 GPM 1.89 LPM / 0.5 GPM ; 1.3 LPM 0.35 GPM - PCA spray				
Water temperature	70°C Maximum				
Security Time	90 seconds - Adjustable by remote control				
<b>ORDERING INFORMATION</b>					
<b>MODEL</b>	<b>CODE</b>	<b>POWER</b>	<b>ADDITIONAL FEATURES</b>	<b>OPTION</b>	<b>CODE</b>
SMART LB	235110	9V battery	Long Spout 90 mm / 3.54"	Remote control	07100005
				Battery-powered matching soap dispenser	235920
SMART LE	235220	9V Transformer	Long Spout 90 mm / 3.54"	Transformer-powered matching soap dispenser	235900

- Installation:**  
Lavatory mounted
- Water supply:**  
Cold or premixed water (1 inlet)
- Water temperature:**  
Max 70 °C
- Operating pressure:**  
0.5 - 8.0 bar
- Power source:**  
9V transformer
- Stern Soap & Water:**  
Elite matching soap dispenser

\* All information of the above is for the reference only. No prior notice is made if any changes.



## SPARE PARTS LIST

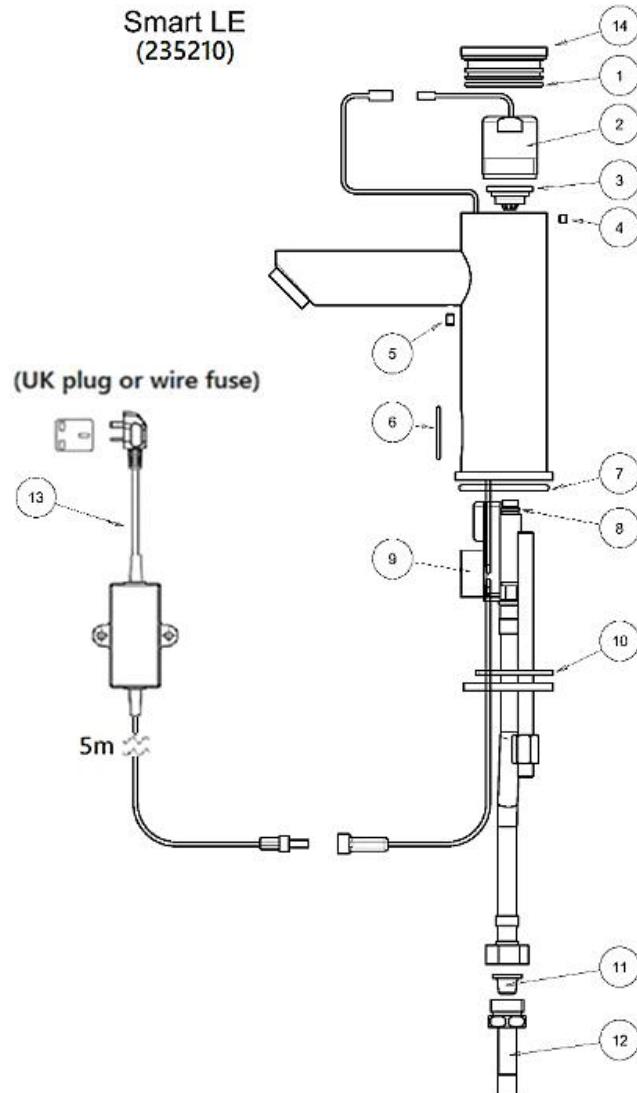

Quantity	Part Number	Description	Cat. No.
-	-	<b>Seals and Screws Kit</b>	<b>07210007</b>
1	1	O-ring	
1	7	O-ring	
1	10	Gasket	
1	4	Screw	
1	5	Screw	
1	6	O-ring	
-	-	<b>Sensor Kit</b>	<b>07220184</b>
1	9	Infra Red Sensor	
1	6	O-ring	
-	-	<b>Filter Adapter Kit</b>	<b>07212001</b>
1	11	Filter	
1	12	Nipple	
-	-	<b>Cover Kit</b>	<b>07270003</b>
1	14	Cover	
1	1	O-ring	
-	-	<b>Solenoid Valve Kit</b>	<b>07230003</b>
1	2	Solenoid valve	
1	3	Diaphragm	
	3	<b>Diaphragm</b>	<b>04500001</b>
	13	<b>Transformer</b>	<b>TBC</b>

**Note:** In order to locate the relevant spare part, please check the corresponding parts and part number in the drawing. Minimum order quantity will be required.

\* All information of the above is for the reference only. No prior notice is made if any changes.




## INSTALLATION

### STEP 1 – PREPARATION FOR MOUNTING THE FAUCET

1 Shut off the water supply.




2 Remove the hexagonal nut, the disk and the gasket. Do not remove the O-ring from the base of the faucet.

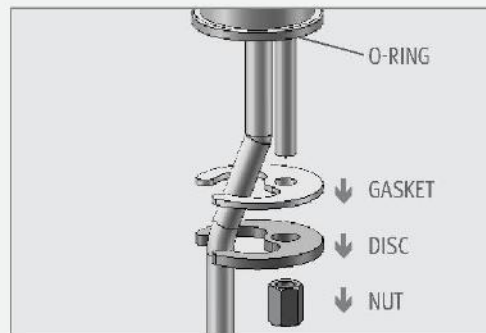


### STEP 2 – INSTALLING THE FAUCET

1 Place the faucet with O-ring into the hole in deck or lavatory. Make sure the O-ring is located between the deck or lavatory and the bottom of the faucet.

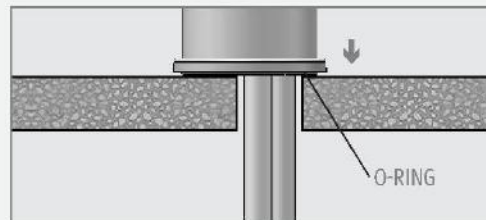

2 Slide the gasket, disk and hexagonal nut over the flexible hose and secure the faucet into place.

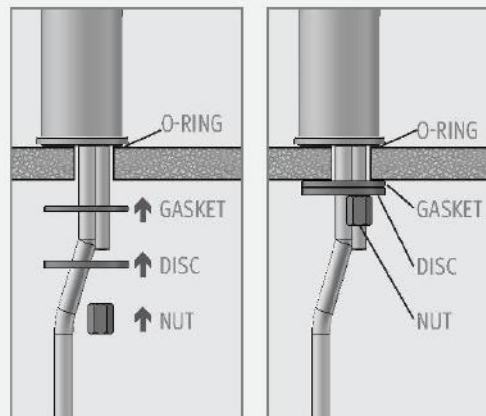




## INSTALLATION

### STEP 3 – CONNECTING THE WATER SUPPLY

1

Connect the flexible pipe to the water supply.


*For models with temperature control connect the red flexible pipe to the hot water supply and the blue flexible pipe to the cold water supply.*

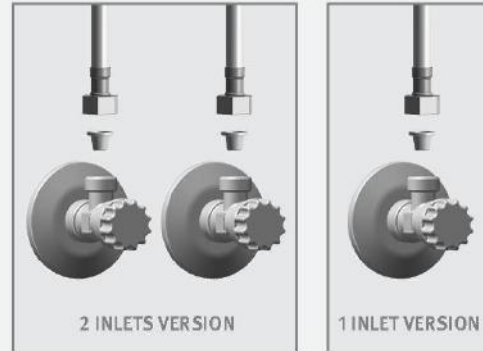

**MAKE SURE THAT THE FILTER(S) IS/ARE INSTALLED BETWEEN THE FLEXIBLE PIPE AND THE SHUT OFF VALVE (ANGLE VALVE) (NOT SUPPLIED).**

2

Turn on the central water supply and the shut-off valves (angle valves) and check for leaks.

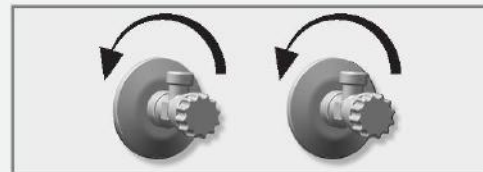




## INSTALLATION

### STEP 4 – CONNECTING THE POWER SOURCE

#### BATTERY VERSION

Install the battery box at the wall underneath the sink using the two sided adhesive foam tape. The cable connection must point down. (You can use an optional extension cable in order to assemble the battery box up to 10ft. away from the sink.)

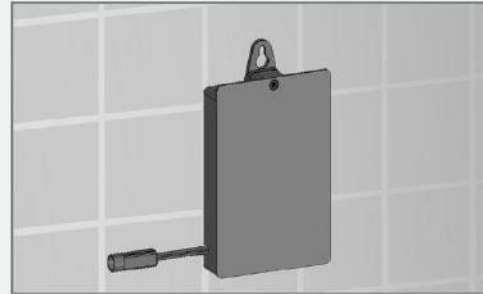

1

#### TRANSFORMER VERSION

Plug the transformer into the electricity socket and connect the connectors.



2

In order to avoid entering into the adjusting mode, wait 10 seconds before operating the faucet. If the range is unsatisfactory, refer to the section titled “settings adjustment.



ABOUT  
**10**  
SECONDS

NOTE: This model includes a special aerator that allows you to adjust the water stream direction on site in order to prevent water splashing if needed. To change the angle of the water stream, simply move the adjustable tilting plate by pressing it smoothly.

**ATTENTION!** the aerator is tightened to prevent removal by hand.





## TROUBLESHOOTING

PROBLEM	INDICATOR	CAUSE	SOLUTION
No water coming out of the faucet:	1. Sensor flashes continuously when user's hands are within the sensor's range.	Low battery.	Replace battery
	2. LED in the sensor does not flash once when user's hands are within the sensor's range.	1. Range is too short.	Increase the range
		2. Range is too long.	Decrease the range
		3. Battery is completely used up	The battery must be replaced.
	3. LED in the sensor flashes once when user's hands are within the sensor's range.	4. Unit is in "Security Mode"	
		5. Sensor is picking up reflections from the washbasin or another object.	Eliminate cause of reflection.
1. Connectors between the electronic unit and solenoid are disconnected.		Connect the electronic unit connectors to the solenoid.	
2. Debris or scale in solenoid.		Unscrew solenoid, pull out the plunger and the spring from the solenoid and clean them. Use scale remover material if needed. When replacing the plunger, please make sure that the spring is in vertical position.	
		3. The central orifice in the diaphragm is plugged or the diaphragm is torn	Clean the orifice or replace diaphragm.
4. The water supply pressure is higher than 8 bar.	Reduce the supply water pressure.		
	5. The water supply pressure is under 8 bars and yet the pressure in the faucet's body is higher. This situation could be caused by a sudden increase in the water supply pressure that the back check prevents from dropping, even after water supply pressure drops under 8 bars.	Shut off water supply and unscrew one of the flexible pipes in order to reduce the pressure that blocks the product.	
Water flow from spout does not stop:	1. Sensor flashes once when user's hands are within the sensor's range.	Debris or scale in diaphragm	Clean the orifice or replace diaphragm.
	2. LED in the sensor does not flash once when user's hands are within the sensor's range.	1. Sensor is dirty or covered.**	Clean or eliminate cause of interference.
		2. Sensor is picking up reflections from the washbasin or another object.	Decrease the range or eliminate cause of reflection.
Water flow diminished		Filter or aerator is clogged	Remove, clean, re-install

\* "Security Mode": If the sensor is covered for more than 90 sec. the faucet will automatically shut off water flow. To return to normal operation remove any blockage.

\*\* In this case, the water flow will stop anyway after 90 seconds because of the security time.