Acme Sanitary Ware Co Ltd



Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk

PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

SANITARY WARE SPECIFICATION SHEET

Item Descriptions Mediclinics (Spain) stainless steel AISI 304 wall-mounted automatic liquid soap dispenser in matte black epoxy finish DC supply Dimensions L110 x W120 x H240 mm Model **DJ0037AB** Material/Finish Stainless Steel / Matte Black Epoxy Finish Manufacturer Mediclinics, S.A. (Spain) Supplier Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen Contact Tel/Fax (852) 2388-7171 / (852) 2710-8012 E-mail acme@acmesanitary.com.hk Website www.acmesanitary.com.hk


General Description

- · Automatic wall-mounted liquid soap dispenser of 1 L capacity, manufactured in stainless steel AISI 304, 0.8 mm thick.
- Available in four finishes (white, black, bright and satin) these soap dispenser models have a functional, robust and trendy design that matches the new range of Mediclinics bathroom accessories.
 This allows this soap dispenser to blend into any space perfectly.
- · Suitable for high traffic facilities and for public use.
- Level display located in the front part of the soap dispenser. It constantly indicates the level of soap available inside the soap dispenser.
- Operates on 6 AA alkaline batteries (not provided).
- · It is recommended to use liquid soap or gel disinfectant soap with the following characteristics:
 - -Maximum alcohol content of 70%
 - -Density between 0.9 and 1.35 kg / dm 3
 - -Viscosity between 550 and 2,500 cps.

It does not support soaps that contain chlorine or solid or abrasive particles.

Screws and plastic plugs to mount on a brick wall supplied.



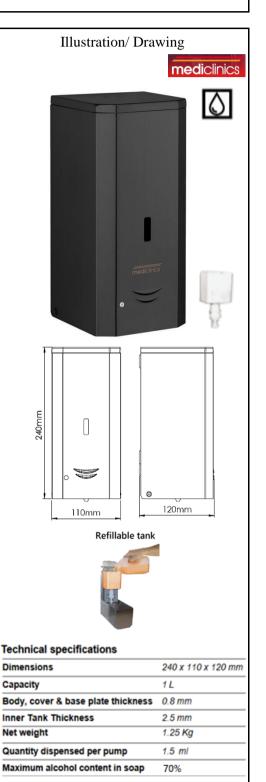





PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	


SANITARY WARE SPECIFICATION SHEET

Components & materials

- · DJ0037A: Stainless steel AISI 304, white epoxy finish.
- · **DJ0037AB**: Stainless steel AISI 304, black matte epoxy finish.
- · DJ0037AC: Stainless steel AISI 304, bright finish.
- · DJ0037ACS: Stainless steel AISI 304, satin finish.
- · COVER: made of stainless steel AISI 304, 0.8 mm thick.
- WALL PLATE: made of stainless steel AISI 304, 0.8 mm thick. It is mounted on the wall by means of four Ø4 stainless steel screws (provided) with their corresponding Ø 6mm plastic plugs (also provided).
- · INNER PLASTIC TANK: prevents oxidation and that can be easily removed for cleaning and disinfection purposes.
- · INFRA-REDDETECTION: with a 5 cm hands detection range.
- · VALVE: anti-drip corrosion resistant that dispenses 1.5ml of soap per service. This anti-drip valve, which dispenses liquid soap, is easily interchangeable with the valves of the other soap dispensers of the same line.
- · HINGED COVER: for operator convenience and speed of service. Opening on top with provided Mediclinics key that allows soap refill.
- · POWER: 6 AA alkaline batteries (not provided).

Mounting Template

Fix the soap dispenser through the holes of the wall and floor plates, using the stainless steel screws supplied and taking into account the distances of the points indicated by an "S" in the next figure:

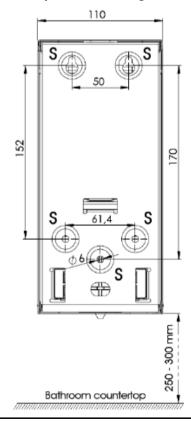

VERY IMPORTANT:

Do not install this soap dispenser inside the shower, as its electrical components can be seriously damaged by water and the dispenser stops working. If you choose the configuration with an electric converter, install it away from any source of water.





Note:




Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk


PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

SANITARY WARE SPECIFICATION SHEET

Installation

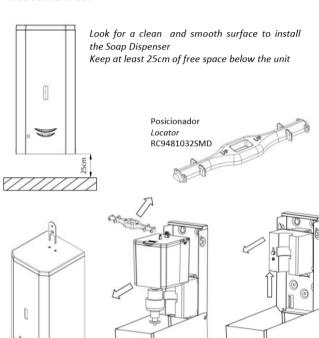


Open the unit with the provided key Remove the soap tank locator and the soap tank with the valve Remove the mechanism

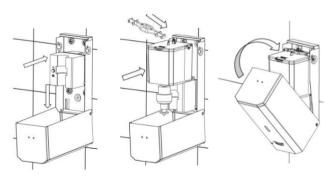

Reassembly the mechanism, the soap tank with the valve and the soap tank locator Close the unit

Operating instructions

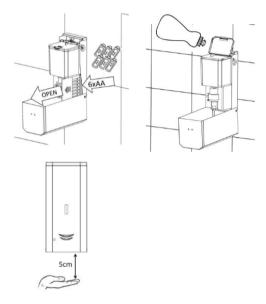

Open the unit with the provided key Remove the battery cover and install 6 Alkaline 1.5V AA batteries. The LED

If you are using the power adapter it is not necessary to install the batteries Open the soap tank cover and fill with soap. Close the unit

Place the hand below the unit. The blue LED blinks and the soap is

dispensed If the red LED blinks the batteries must be replaced

Specifications

Body material (all versions)	Stainless Steel AISI 304			
Dimensions	240 x 120 x 120 mm			
Soap Tank Capacity	1000 ml			
Battery	6 x Alkaline AA (1.5V)			
Room Temperature	+5ºC - +40ºC			
Dispensed soap quantity	1-2 ml (liquid)			
Suggested viscosity (liquid)	500-2500 cps			
Max. Alcohol content in soap	70%			

Note:

