



Acme Sanitary Ware Co. Ltd.

1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong



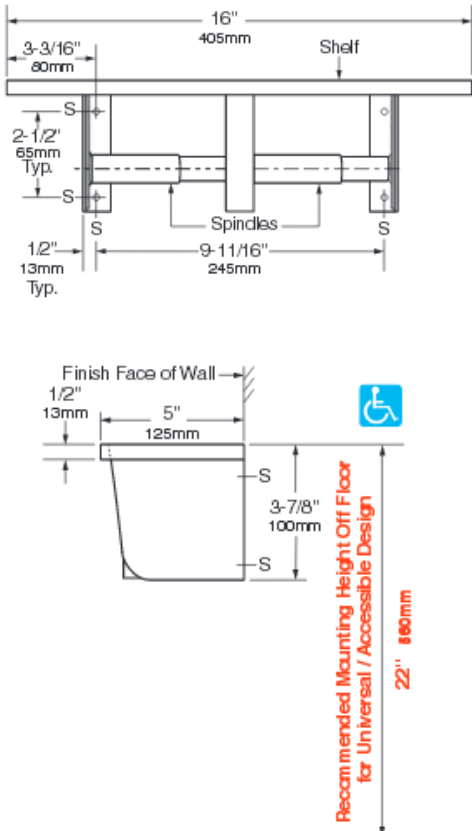
Tel: 2388 7171 Fax: 2710 8012

Email: acme@acmesanitary.com.hk

Website: www.acmesanitary.com.hk

PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

SANITARY WARE SPECIFICATION SHEET

Item Descriptions	Bobrick (USA) Stainless steel surface mounted double roll paper holder with shelf	<p>Illustration/ Drawing</p>  
Dimensions	L405 x W100 x H125mm	
Model	B-2840	
Materials	Stainless Steel	
Manufacturer	Bobrick (USA)	
Source	Acme Sanitary Ware Co. Ltd	
Contact Tel/Fax	Mr. Eric Wong/ Mr. Don Yuen	
E-mail	(852) 2388-7171 / (852) 2710-8012	
Website	acme@acmesanitary.com.hk	
<p>MATERIALS:</p> <p>Shelf — 18-8, type-304, 20-gauge (1.0mm) stainless steel with satin finish. 1/2" (13mm) return edges for maximum rigidity. Front edge is hemmed for safety.</p> <p>Mounting Brackets — 18-8, type-304, 18-gauge (1.2mm) stainless steel with satin finish. Welded to shelf.</p> <p>Toilet Tissue Dispensers (2) — Support brackets are 18-8, type-304, 18-gauge (1.2mm) stainless steel with satin finish. Equipped with two chrome-plated plastic spindles, each with a heavy-duty internal spring.</p> <p>OPERATION:</p> <p>Close clearance of support brackets deters removal of toilet tissue rolls until they are depleted. Unit holds two standard-core toilet tissue rolls up to 5-1/2" (140mm) diameter (1800 sheets).</p> <p>Designer's Note: It is recommended that one full toilet tissue roll remain wrapped or taped until the other roll has been depleted to avoid wasting the ends of both rolls.</p> <p>INSTALLATION:</p> <p>Mount unit on wall or partition with four #7 x 1-1/2" (3.8 x 38mm) sheet-metal screws (not furnished) at points indicated by an S.</p> <p>For partitions with particle-board or other solid core, provide sheet-metal screws or through-bolts, nuts, and washers.</p> <p>For hollow-core metal partitions, provide solid backing into which sheet-metal screws can be secured. If two units are installed back-to-back, then provide threaded sleeves and machine screws for the full thickness of partition.</p> <p>For plaster or dry wall construction, provide concealed backing to comply with local building codes, then secure unit with #7 x 1-1/2" (3.8 x 38mm) or longer sheet-metal screws.</p> <p>For other wall surfaces, provide #7 x 1-1/2" (3.8 x 38mm) sheet-metal screws and fiber plugs or expansion shields, or provide 1/8" (3mm) toggle bolts or expansion bolts.</p> <p>SPECIFICATION:</p> <p>Surface-mounted toilet tissue dispenser and utility shelf shall be type-304 stainless steel with satin finish. Shelf shall have 1/2" (13mm) return edges with front edge hemmed for safe handling. *Spindles shall be chrome-plated plastic with heavy-duty internal spring and shall hold standard-core toilet tissue rolls up to 5-1/2" (140mm) diameter (1800 sheets).</p>		 <p>Technical drawing showing top and side views of the unit with dimensions in inches and millimeters.</p> <p>Top View Dimensions:</p> <ul style="list-style-type: none"> Shelf: 16" (405mm) Shelf Edge: 3-3/16" (80mm) Spindles: 9-11/16" (245mm) Mounting Bracket: 2-1/2" (65mm) Typ. Mounting Bracket: 1/2" (13mm) Typ. <p>Side View Dimensions:</p> <ul style="list-style-type: none"> Finish Face of Wall: 1/2" (13mm) Mounting Bracket: 5" (125mm) Spindles: 3-7/8" (100mm) Recommended Mounting Height Off Floor for Universal / Accessible Design: 22" (560mm)

* All information of the above is for the reference only. No prior notice is made if any changes.

Source: Bobrick Washroom Equipment Inc.