

Acme Building, 22-28 Nanking Street, Kow Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk

PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

## SANITARY WARE SPECIFICATION SHEET

Item Descriptions	Mediclinics "Machflow®" (Spa		Illustration/ Drawing					
	wall-mounted automatic hand di ionizer in white epoxy finish	ryer with an	325	mediclinics				
			km/h					
Dimensions	L213 x W170 x H330 mm			ON HIGH				
Model	M09A-I		me	dinc .				
Material/ Finish	Steel / White Epoxy Finish							
Manufacturer	Mediclinics, S.A. (Spain)							
Supplier	Acme Sanitary Ware Co. Ltd			ALSO				
	Mr. Eric Wong/ Mr. Don Yuen			AVAILABLE IN BLUE ANGEL				
Contact Tel/Fax	(852) 2388-7171 / (852) 2710-8	8012		VERSION				
E-mail	acme@acmesanitary.com.hk							
Website	www.acmesanitary.com.hk							
General description			<──170 mm →	←213 mm→				
-	w Plus hand dryer, available in steel,	Freek 2 CS						
white or black finish and in A finish.	AISI 304 stainless steel, bright or satin			1 m				
	obust design, this hand dryer is							
	nd sustainable, providing great energy		330 mm					
0	rying. Strongly recommended for high W	M09A-1 Vhite epoxy finish						
<ul><li>traffic places.</li><li>It has an adjustable power</li></ul>	motor that regulates anarry							
	and 1,500W) and provides a maximum		K					
	that dries your hands between 10 and		0000					
15 seconds.								
1	orate, optionally, a HEPA filter media in suspension (pollen, dust mites,		Technical Specifications					
tobacco smoke, etc.) significa	antly improving air quality	M09AB-1 te black epoxy finish	Voltage	220- 240 V 50/60 Hz				
concert sinoke, etc./ signified	man quanty. Man	te black epoxy fillion	Frequency Electrical Isolation	Clase I				
. As a complement to the III	EDA filtermedium and also entionally							


• As a complement to the HEPA filtermedium, and also optionally, the Machflow Plus can incorporate an ionizer ("Ion Hygienic" technology) that cleans and purifies the air through the emission of anions, eliminating most of the germs and particles transported through the air, helping it to be purer and healthier.

 Optionally, it is also possible to incorporate a quick assembly / disassembly kit for the machine ("Plug-in" kit code KTP009) that allows you to install and uninstall the hand dryer easily, quickly and safely, making maintenance much more efficient and reducing your costs at the same time.

• New air concentrator nozzle which helps to channel better the airflow on the hands. Instead of blowing air all over the hands, it focuses the airflow for a more targeted drying. The narrower opening of the concentrator gives the airflow greater pressure on exit, boosting its speed and thus, making the hand drying process much more efficient.



M09ACS-I Satin finish

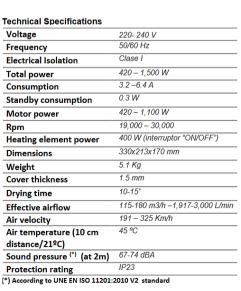

EAL CROHS 24

Note: **YouTube** https://y

https://youtu.be/qDUU0ues3DE

湯

### **Acme Sanitary Ware Co Ltd**



Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk

PROJECT	REF	REV	ITEM CODE	$\bigcirc$
LOCATION	DATE		PAGE	

# SANITARY WARE SPECIFICATION SHEET

• It has an odor neutralizer, code RCPOM14 that aromatizes and deodorizes the environment thanks to its soft fragrance (optional).

· Machflow Plus is equipped with an automatic safety disconnection system that switches it off automatically after 60 seconds of continuous use.

• It is supplied as standard with all the elements to fix it to a brick wall.

#### Components and materials

• COVER: made of steel (M09A...and M09AB...) or AISI 304 stainless steel (M09AC...and M09ACS...) of 1.5 mm thickness, in one piece without welding.

· BASE PLATE: made with PA6V0 fire resistant plastic. It incorporates 4 silent-blocks to cushion mechanical vibrations.

• INTERIOR SET: made of PA6V0 fire resistant plastic.

• MOTOR: vacuum universal brush motor, F class. Speed may be adjusted manually between 19.000 and 30.000 rpm by means of a potentiometer.

• **HEATING ELEMENT**: minimum waved wire NiCr heating element of 400W, mounted on a mica frame that incorporates a self-resetable thermal cut-off which disconnects the whole appliance. The heating element can be disconnected by means of a ON/OFF switch.

• HANDS DETECTION SYSTEM: fully adjustable IR electronic detection sensor by means of a potentiometer. Detection distance can be adjusted between 5and 25 cm. It has an automatic disconnection system after 60 "of continuous use.

• HEPA FILTER MEDIUM: which filters the solid particles in suspension (pollen, dust mites, tobacco smoke, etc.) significantly improving air quality (optional).


· IONIZER: cleans and purifies the air through negative ions (anions) that remove microscopic particles from the air and make it healthier (optional).

· ODOR NEUTRALIZER: aromatizes and deodorizes the environment through its soft fragrance (optional).

#### Operation

Place the hands under the air outflow valve. The dryer will start automatically, and go on with no interruption as long as the hands are kept in the detection range of the sensor. The appliance will stop 2 seconds after the handsare removed from the airflow or 60 seconds after continuous working.

### Mounting (Recommended hights distance from the floor)

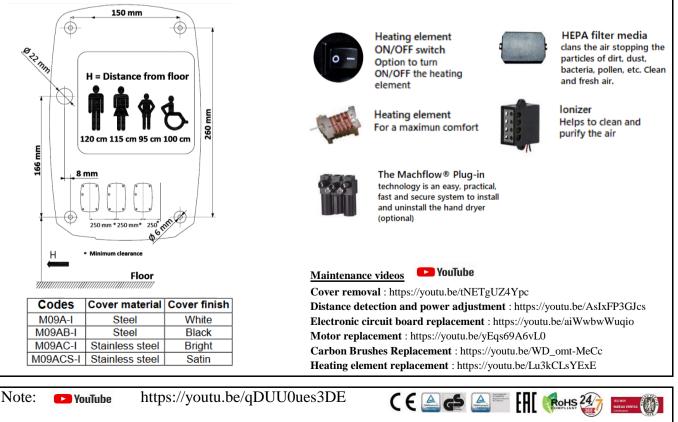

\* All information of the above is for the reference only. No prior notice is made if any changes.

## Acme Sanitary Ware Co Ltd



Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk

PROJECT	REF	REV	, ITEM CODE	
LOCATION	DATE		PAGE	

# SANITARY WARE SPECIFICATION SHEET


### PLUG-IN SYSTEM

The Machflow® Plug-in technology is an easy, practical, fast and secure system to install and uninstall a hand dryer, making maintenance much more efficient and reducing at the same time its costs.

With the Machflow® Plug-in technology a hand dryer can be installed in a few steps and it can be replaced in less than 10 seconds thanks to its SMED (Single-Minute Exchange of Die) system. Furthermore its maintenance can be carried out better at the maintenance workshop and it is totally secure against electric shocks. All of these benefits allow you to reduce the

This fast install/uninstall technology to the wall is **optional** and it is carried out by means of a special kit code: KTP009.

Installation of the dryer with this system is as follows

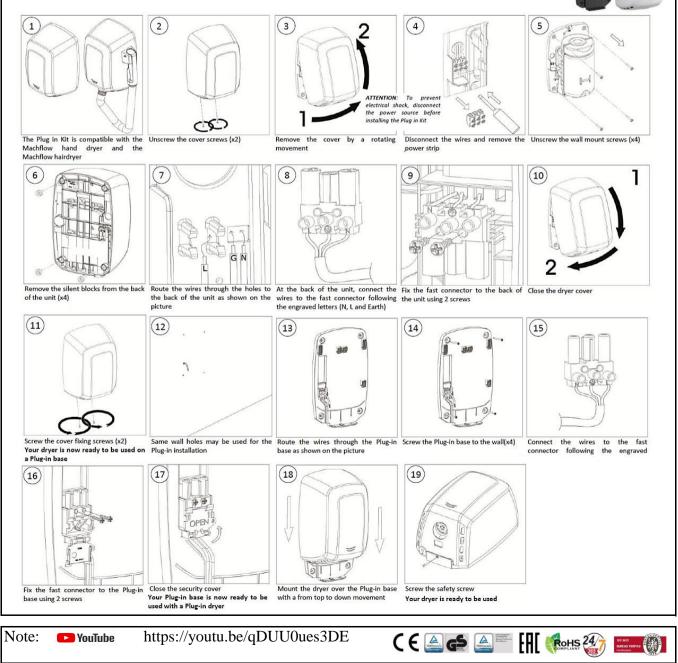

\* All information of the above is for the reference only. No prior notice is made if any changes.



Acme Sanitary Ware Co Ltd Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk

### HAND DRYERS Table

					Tab	le								
	MODEL OPERATION DIMINENSIONS					10 U			MOTOR			TRAFFIC FREQUENCY		
	WIODEL	OFER				HEPA filter media	Drain Pipe	ADJUSTABLE	MOTOR			TRAFFIC FREQ		
		manual	sensor	(mm)	lonizer	[₹₽]	<u>.</u>	POWER		bruch		HIGH MEDI	MEDIUM	IOW
		manuai	SCHSUI	(mm)	⊡	[포티	Da		induction	brush	brushiess	nign	MEDIUM	1011
-	dualflourp	LIS.									6	ualflau	irolus	
	M24A		•		*	•	*				•	•		
	M24AB		•		*	•	*				•			
	M24ACS		•		*	•	*					•		
	M14A		•	L320xD228xH665	*	•	8	•		•		•		
	M14AB		•		*	•	8	•		•		•		
	M14ACS		•	1	*	•		•		٠		•		
	mochflow'r	n / suk	nachfilo	w.						mo	chflow-plu	us / ma	chilow	
	M19A		٠		*	*		•			•	•		
	M19AB		•		\$	*		•			•	•		
	M19AC		•		*	*		•			•	•		
	M19ACS		•	L213xD170xH330	*	*		•			•	•		
1.00	M09A		•		*	*		•		•		•		
	M09AB		•		8	*		•		•		•		
	M09AC M09ACS		•	-	*	*		•		•		•		
	speedflou	nolus	-	dlour	\$	~				-	ow plus/	-	flour	
	M17A	pios	spee		*	•		•	S	peedit	500 pros/	speed	anour	
-	M17AB		•		*									
	M17AC		•		*	•								
	M17ACS		•		*	•		•		•		•		
	M17AF		•	L290xD100xH270	*	•		•		•		•		
	M06A		•	(INSIDE CABINET)				•		٠		٠		
	M06AB		•	]				•		٠		•		
	M06AC		•	]				•		٠		•		
	M06ACS		•					•		•		•		
	M06AF		•					•		•		•	10	
	saniflow*		1									niflow*		
	E05 E05B	•				<u> </u>	-			•		•		
100	E05C	•		L276xD214xH245	<u> </u>					•		•	-	<u> </u>
	E05CS	•										•		
	E85	•		L282xD215xH255						•				
	E88	•		LEGENDEISKIESS						•		•		
	E88B	•		1						•		•		
	E88C	•		L278xD212xH248						•		•		
	E88CS	•		1						•		•		
	E880	•								•		•		
	E05A		•	L276xD214xH245	•					•		•		
	E05AB		•		•					•		•		
400 min	E05AC E05ACS		•		•	<u> </u>	-			•		•		
	E85A		•	100000015000055	•							•	-	<u> </u>
(0)	E88A		•	L282xD215xH255	•									
	E88AB		•	1	•					•		•		
	E88AC		•	L278xD212xH248						•		•		
	E88ACS		•		•					•		•		
	E88AO		•		•					•		•		
	mediflow*											med	diflow	
	M02A		•		•					•			•	
0-1	M02AB		•		٠					•			•	
	M02AC		•		•					•			•	
	M02ACS		•	L275xD164xH325	•					•			•	
	M03A M03AB		•	-	•					•			•	
	M03AC		•	-	•					•			•	<u> </u>
	MOSAC		•	-	•					•			•	<u> </u>
	cotino				-		·					0	otimo	
	M99A		0		0				•					
	M99AC			L260xD150xH302										
	M99ACS		•		0									
-	autonoinui				-		-					i.r	Pulanoir	
	M88APLUS		0	L253xD150xH303	0				0				0	
1	M88PLUS	0		L253xD153xH303					0				0	
	smarthaw					-						sm	artito	iur-
	M04A		0		0					0				0
	M04AC			L147xD138xH259	0									0
12	M04ACS		0							•				0
* Optional														