



# Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong  
 Tel: 2388 7171 Fax: 2710 8012  
 E-mail: acme@acmesanitary.com.hk  
 Website: www.acmesanitaryware.com.hk

PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

## SANITARY WARE SPECIFICATION SHEET

Item Descriptions	Mediclinics (Spain) steel push-button hair dryer in white enamelled coating finish	<p>Illustration/ Drawing</p>   
Dimensions	L278 x W235 x H248 mm	
Model	SC0088H	
Material/ Finish	Steel / White Enamelled Coating Finish	
Manufacturer	Mediclinics, S.A. (Spain)	
Supplier	Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen	
Contact Tel/Fax E-mail Website	(852) 2388-7171 / (852) 2710-8012 acme@acmesanitary.com.hk www.acmesanitary.com.hk	

### General description

- Saniflow® hair dryer is the rotating nozzle hair dryer that is most widely used in the world, regardless of the location to be fitted.
- These machines also feature easy maintenance, low noise levels and a high level of user safety. Together with an accurate design of components, SANIFLOW dryers boast the most powerful airflow in the world, which, combined with a comfortable drying temperature, reduces drying times to a minimum.
- With a 1.5 mm. thick steel cover, these hair dryers are available in 2 different finishes (white enameled coating and satin). These hair dryers are ideal for Heavy traffic Bathrooms.
- Thus, these are proven models with a long durability and complete reliability, with anti-vandalism features and designed to be installed in high traffic of people such as airport centers, swimming pools, SPA and wellness centers and large recreational areas, among others.



SC0088H  
White enamelled coating



SC0088HCS  
Satin chrome

### Components & materials:

- SC0088H:** 1.5 mm. thick steel cover, white enamelled coating finish.
- SC0088HCS:** 1.5 mm. thick steel cover, satin finish.
- One-piece steel cover fixed to the base by means of 2 vandal-proof lock screws and lock with special Saniflow ® wrench.

### Technical Specifications

<b>Voltage</b>	220- 240 V
<b>Frequency</b>	50/60 Hz
<b>Electrical Isolation</b>	Class I
<b>Total power</b>	2,250 W
<b>Consumption</b>	10 A
<b>Motor power</b>	250 W
<b>Rpm</b>	5,500
<b>Heating element power</b>	2,000 W
<b>Dimensions</b>	248x278x235 mm
<b>Weight</b>	5.9 Kg
<b>Cover thickness</b>	1.5 mm
<b>Effective airflow</b>	250 m <sup>3</sup> /h (4,250 L/min)
<b>Air velocity</b>	100 Km/h
<b>Air temperature (10 cm distance/21°C)</b>	53 °C
<b>Sound pressure (*) (at 2m)</b>	70 dBA

(\*) According to UNE EN ISO 11201:2010 V2 standard.

### Note:



\* All information of the above is for the reference only. No prior notice is made if any changes.

Source: Mediclinics.



# Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong  
Tel: 2388 7171 Fax: 2710 8012  
E-mail: acme@acmesanitary.com.hk  
Website: www. acmesanitaryware.com.hk

PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

## SANITARY WARE SPECIFICATION SHEET


### Components & materials:

- Base in aluminium, 3 mm thick, with 4 Ø 8 mm holes for wall mounting.
- Fire resistant plastic UL 94-VO fan scroll.
- Universal brush motor, 5,500 rpm, F class, which includes a safety thermal cut-off.
- Aluminium centrifugal double symmetrical inlet fan wheel.
- Waved wire NiCr heating element on a mica frame that incorporates a thermal cut-off.
- 360° Nozzle in chrome plated Zamak.
- Push-button in chrome plated Zamak, that activates an electro-mechanic timer with a 90 second cycle.
- 4 silent blocks to eliminate vibrations.

### Operation

Press the button to initiate the drying process. The dryer will go on with no interruption for 90 seconds. Please direct the nozzle to the hair at your own convenience.

### Mounting (Recommended heights distance from the floor)

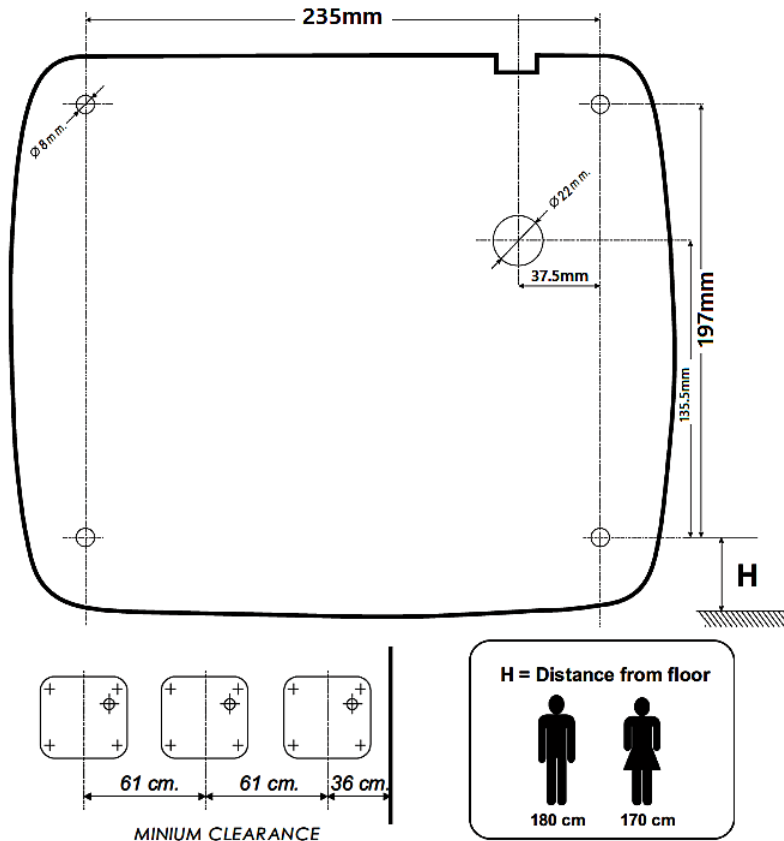

Cover removal : <https://youtu.be/9iGnI31dmkg>

Timer replacement : <https://youtu.be/jeFUj-4bBTI>

Motor replacement : <https://youtu.be/efa0mPVS5Mk>

Carbon Brushes Replacement : <https://youtu.be/4uAgUeOUmI>

Heating element replacement : <https://youtu.be/CCFs7BIONAo>

Fan wheel replacement : <https://youtu.be/9skhuih3D9s>



Note:



\* All information of the above is for the reference only. No prior notice is made if any changes.

Source: Mediclinics.