

1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Since 1949 Website: www.acmesanitary.com.hk

# American Standard

Illustration/ Drawing

PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

## SANITARY WARE SPECIFICATION SHEET

American Standard (PRC) "Pristine" E-Bidet Item Descriptions front and rear cleaning hested seat Dimensions L511 x W472 x H173 mm Model CEAS7SS1-0100510H0 Material Plastic Manufacturer American Standard (PRC) Source Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen Contact Tel/Fax (852) 2388-7171 / (852) 2710-8012 E-mail acme@acmesanitary.com.hk Website www.acmesanitary.com.hk

## **Pristine E-Bidet**

Front and rear cleansing

Heated seat

Single stainless nozzle with


self-cleaning

Anti-bacterial resin

Warm air dryer (selected models) Auto deodorization (selected models)

One-touch auto cleansing, oscillation

& massage (selected models)

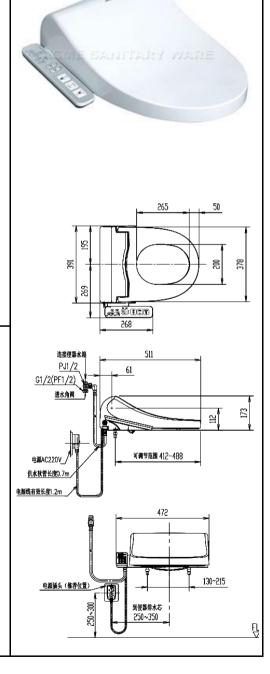

Note: Equivalent to CEAS7SS1-0100510C0


<sup>\*</sup> All information of the above is for the reference only. No prior notice is made if any changes.



1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Website: www.acmesanitary.com.hk

## American Standard

PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

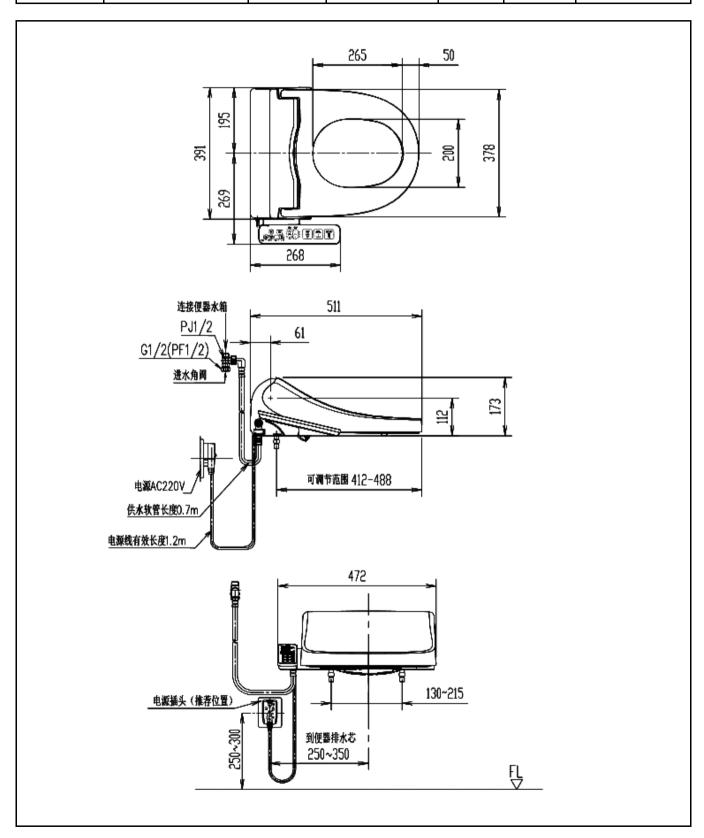

Note:

<sup>\*</sup> All information of the above is for the reference only. No prior notice is made if any changes.



1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012

Email: acme@acmesanitary.com.hk Website: www.acmesanitary.com.hk

# American Standard

PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

Product Code		CEAS7SL1
Dimensions (W x	L x H)	472 x 535 x 173mm (Long) 472 x 511 x 173mm (Short)
Hygienic Cleansi	ing	
Nozzle		Dual Nozzles
Warm Water Sup	ply System	Hot Water Storage
Posterior Cleansi	ng	
Feminine Cleansi	ing	•
Feminine Air Bub	ble Soft Cleansing	•
Oscillating		•
Massage		•
One-Touch Clean	sing	
Water Pressure A	djustment	3 - 5 Levels
Nozzle Position A	djustment	5 Levels
Comfort		
Dryer (Adjustable	Temperature)	3 Levels
Auto Deodorizer		•
	ustable Temperature)	3 Levels (with Auto-Off)
Seat Sensor		•
	Seat (SIAA Standard)	•
Anti-Bacterial	Cover	•
Protection	Nozzle	•
	Remote/ Panel (Surface Only)	•
Soft Closing Seat & Cover		•
Easy To Clean		
Type of Nozzle		PPE Nozzle
Self-Cleaning Nozzle		•
Nozzle Shutter		•
Quick-Detach Seat Cover		
Power Saving		

SIDE PANEL FUNCTIONS

ADJUSTABLE SPRAY STRENGTH

Factory default is set at 3 levels

but user can set it up to 6 levels.

B ADJUSTABLE NOZZLE POSITION

With 5 levels

电源 开/关

### ASY TO CLEAN COMFORT TECHNOLOGY



### SELF CLEANING NOZZLE

Nozzle tips are rinsed with water before and after every use.



A nozzle shutter prevents waste materials from getting to the nozzle tips, thus ensuring better hygiene.

## QUICK-DETACH SEAT COVER

The design of the seat cover allows it to be easily detached for convenient cleaning of hard-to-reach areas.

### HEATED SEAT

Temperature can be easily adjusted for comfort. Setting is computer-memorized and is kept at same setting as previous user.



### DEODORIZER

The deodorizer is activated as soon as the user is seated.



### DRYFR

Temperature can be easily adjusted for comfort. Computer-memorized settings allows one to keep the same settings as the previous user's.

### NERGY SAVING



ONE-TOUCH POWER SAVER

Seat and water heating functions will

水温 Water Temp

| 暗標 |

后

0

stop, while cleansing and flushing will still

### ONE-TOUCH POWER SAVER

Under the power saving mode, water heating and seat heating functions will stop, while cleansing and flushing will still operate. Machine will resume to original settings after 8 hours.



### ANTI-BACTERIAL PROTECTION

Anti-bacterial additive is applied to the seat, cover, nozzles and control panel to effectively inhibit bacteria breeding. Certified to SIAA ISO 22196 standard for anti-bacterial efficacy (seat only).



SLOW CLOSING SEAT & COVER Gentle and quiet closing action.

## HYGIENIC CLEANSING



### DUAL NOZZLES

Equipped with dedicated front and rear cleansing nozzles.



### POSTERIOR CLEANSING

Offers a strong, direct spray for a thorough cleanse.



### FEMININE AIR BUBBLE SOFT CLEANSING

A gentle flow of warm aerated water provides a soothing shower that's gentle enough for a woman's





MASSAGE The spray alternates between strong and mild sprays, creating a massaging effect that indulges



Suitable for both elderly and children, one-touch cleansing activates the posterior/feminine oleansing & dryer functions consecutively at a touch of a button.

# ADJUSTABLE SEAT AND With 3 levels.

# American Standard

Raising The Standard

Note
------

WATER TEMPERATURE With 3 levels

<sup>\*</sup> All information of the above is for the reference only. No prior notice is made if any changes.



1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Since 1949 Website: www.acmesanitary.com.hk

# American Standard

PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	





<sup>\*</sup> All information of the above is for the reference only. No prior notice is made if any changes.



1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Since 1949 Website: www.acmesanitary.com.hk

# American Standard

PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

## LASTING CLEANING

## 臀部清洗 持久煦流

脉冲水流技术,满足长时间清洗需求,舒适臀洗, 清洁卫生,呵护家人娇嫩肌肤,更方便自由。



## I WOMEN CLEANING

妇洗的轻柔泡沫清洗模式,空气与水流比例融合,细腻 柔和雾状水流,温柔呵护女性肌肤,私处护理更贴心。



## MASSAGE CLEANING

## 移动清洗

臀部清洗-移动清洗 按下臀部清洗按键,清洗水流从喷嘴前 端喷出,清洗臀部。再次按下,将进入前后移动清洗状态, 扩大清洗范围。

妇洗-移动清洗 按下妇洗按键,清洗水流从喷嘴前端喷出,清 洗女性的敏感部位。再次按下,将进入前后移动清洗状态, 扩大清洗范围。



## MASSAGE CLEANING

在臀部清洗中按下"按摩"按键,开启臀部按摩清洗功能, 喷嘴水势大小可以调节,给您带来犹如按摩的清洗体验。 \*妇洗不具备按摩清洗功能。



## WARM WATER

按住"水温"和喷嘴位置"后"按键并保持2秒以上即可将 温水温度切换为5档调节,智能人性化五档水温调节,冲洗 水温更稳定, 供应更持久。



N	ote
---	-----



1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Since 1949 Website: www.acmesanitary.com.hk


# American Standard

PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	



## 安装前请先确认座便器及周围尺寸

满足D、E、H尺寸 ,即可安装于80%以上的座便器。

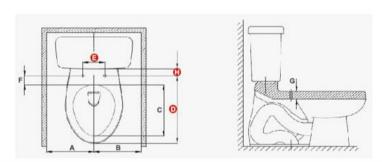

序号	检查项目名称	明韵系列电子盖板(长版)	明韵系列电子盖板(短版)
1	安装孔到陶瓷顶端距离D	500mm≥D≥437mm	475mm≥D≥412mm
2	安装孔中心距 <mark>E</mark>	215mm≥E≥130mm	215mm≥E≥130mm
3	座便器周围宽度A/B	A≥270mm B≥195mm	A≥270mm B≥195mm
4	座便器内径长度C	396mm≥C≥334mm	377mm≥C≥314mm
5	安装孔到座便器内径距离F	F<110mm	F<110mm
6	安装孔深度G	G≥50mm ( 盲孔 ) 通孔不限	G≥50mm (盲孔)通孔不限
7	水箱到安装孔距离H	H≥25mm	H≥25mm

N	ote	•
T.A	ou	•

<sup>\*</sup> All information of the above is for the reference only. No prior notice is made if any changes.