



Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong

Tel: 2388 7171 Fax: 2710 8012

E-mail: acme@acmesanitary.com.hk

Website: www.acmesanitaryware.com.hk

PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

SANITARY WARE SPECIFICATION SHEET

Item Descriptions	Mediclinics (Spain) stainless steel AISI 304 wall-mounted push-button liquid soap dispenser in matte black epoxy finish	<div>Illustration/ Drawing</div> <div></div>												
Dimensions	L100 x W128 x H275 mm													
Model	DJ0040B													
Material/ Finish	Stainless Steel / Matte Black Epoxy Finish													
Manufacturer	Mediclinics, S.A. (Spain)													
Supplier	Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen													
Contact Tel/Fax	(852) 2388-7171 / (852) 2710-8012													
E-mail	acme@acmesanitary.com.hk													
Website	www.acmesanitary.com.hk													
General Description <ul style="list-style-type: none">· Liquid soap dispenser, wall mounted made in stainless steel AISI 304.· Push-button operated.· Robust and vandal-resistant.· Suitable for high traffic facilities.· Model suitable for public use.· Allows disinfectant solutions, liquid soaps or hydro-alcoholic gel. Surgical soaps and soaps with solid abrasive particles are not supported.		<div></div> <div>DJ0040 White epoxy finish</div> <div></div> <div>DJ0040B Black mate epoxy finish</div> <div></div> <div>DJ0040C Bright finish</div> <div></div> <div>DJ0040 Satin finish</div>	<div></div> <div></div>											
Components & materials <ul style="list-style-type: none">· DJ0040: Stainless steel AISI 304, white epoxy finish.· DJ0040C: Stainless steel AISI 304, bright finish.· DJ0040CS: Stainless steel AISI 304, satin finish.· DJ0040B: Stainless steel AISI 304, black matte epoxy finish.· Push button made in thermoplastic with stainless steel cover 0,8mm thick.· Push button frame made in green plastic RAL 7022.· Content viewer on the front that allows see the soap level in each moment.· Corrosion-resistant anti-drip valve.· In inner tank made in plastic, 2,5mm thick.· Hinged cover for operator convenience and speed of service.· Opening on top with provided Mediclinics key that allows soap refill.· It is mounted on the wall by means of 3 stainless steel screws with their corresponding Ø 6mm well plugs (the upper ones attach the dispenser whilst the lower one fix it to the wall). Screws and plugs are provided.		<div>Technical Specifications</div> <table><tr><td>Dimensions</td><td>275x100x128 mm</td></tr><tr><td>Capacity</td><td>1. 500 ml</td></tr><tr><td>Body, cover & base plate thickness</td><td>0.8 mm</td></tr><tr><td>Inner Tank Thickness</td><td>2.5 mm</td></tr><tr><td>Net weight</td><td>1.2 Kg</td></tr><tr><td>Quantity dispensed per pump</td><td>0.8 ml</td></tr></table>	Dimensions	275x100x128 mm	Capacity	1. 500 ml	Body, cover & base plate thickness	0.8 mm	Inner Tank Thickness	2.5 mm	Net weight	1.2 Kg	Quantity dispensed per pump	0.8 ml
Dimensions	275x100x128 mm													
Capacity	1. 500 ml													
Body, cover & base plate thickness	0.8 mm													
Inner Tank Thickness	2.5 mm													
Net weight	1.2 Kg													
Quantity dispensed per pump	0.8 ml													

Note:

* All information of the above is for the reference only. No prior notice is made if any changes.

Source: Mediclinics.



Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong

Tel: 2388 7171 Fax: 2710 8012

E-mail: acme@acmesanitary.com.hk

Website: www.acmesanitaryware.com.hk

PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	


SANITARY WARE SPECIFICATION SHEET

Operation

Place one hand just under the soap dispenser valve and press the center push-button until the end of the soap dosage.

Mounting Template

Fix the soap dispenser on the wall to 100-150 mm from shelf or bath counter top, using the provided screws through the back mounting plate holes (points indicated by an "S" in the figure below).

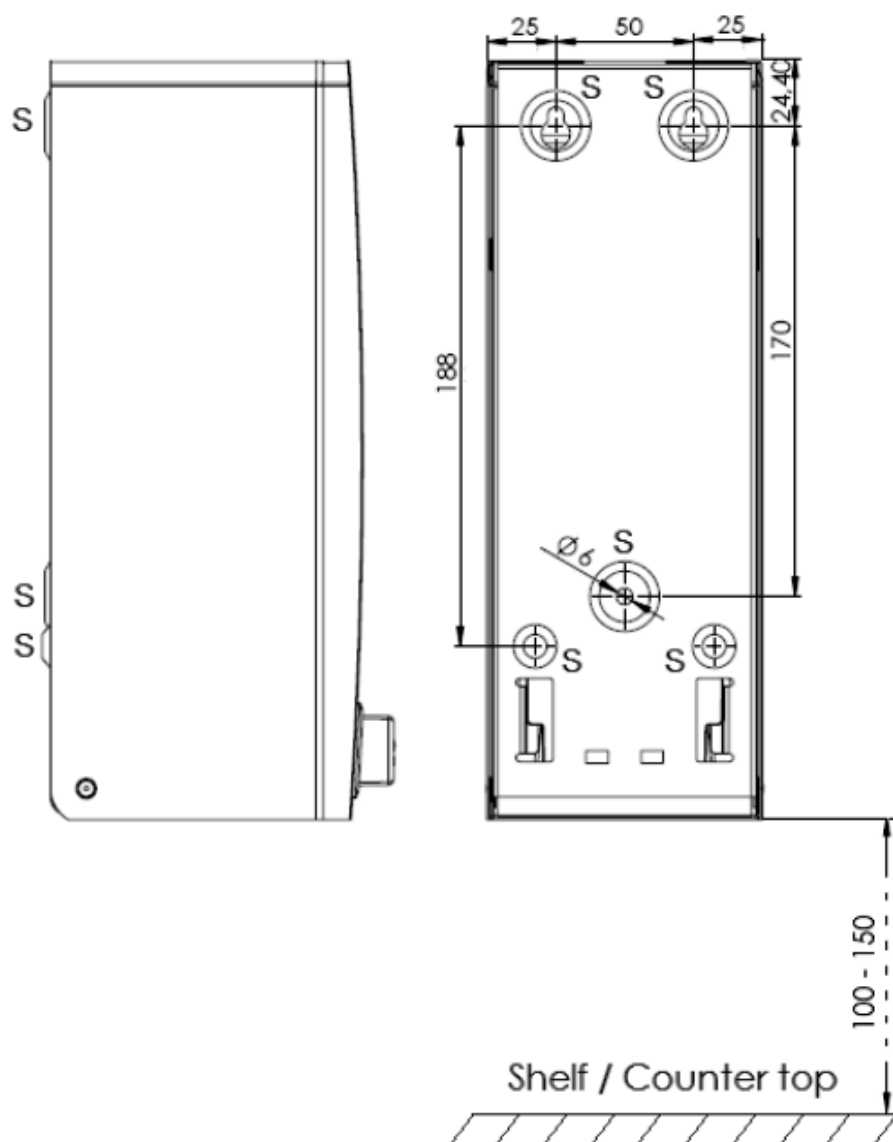

Refillable tank



Note:

* All information of the above is for the reference only. No prior notice is made if any changes.

Source: Mediclinics.

