


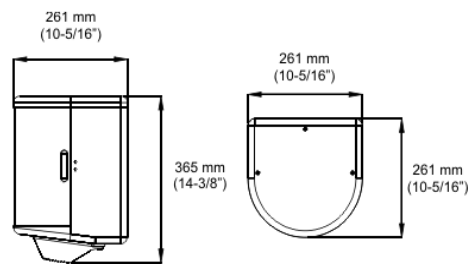


## Acme Sanitary Ware Co Ltd

Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong  
Tel: 2388 7171 Fax: 2710 8012  
E-mail: [acme@acmesanitary.com.hk](mailto:acme@acmesanitary.com.hk)  
Website: [www.acmesanitaryware.com.hk](http://www.acmesanitaryware.com.hk)

PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

## SANITARY WARE SPECIFICATION SHEET

Item Descriptions	Centre feed dispenser steel white epoxy	Illustration/ Drawing
Dimensions	L261 x H365 x W261 mm	
Model	DT0303	
Material/ Finish	Steel / White Epoxy	
Manufacturer	Mediclinics, S.A. (Spain)	
Supplier	Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Wilson Hung	
Contact Tel/Fax	(852) 2388-7171 / (852) 2710-8012	
E-mail	acme@acmesanitary.com.hk	
Website	www.acmesanitary.com.hk	
<b>Components and Materials</b> <ul style="list-style-type: none"><li>Steel body, 1 mm thick, white epoxy finish. It is mounted on the wall by means of 4 wood screws with their corresponding 6 mm wall plugs.</li><li>Polyamide "lid ring" jointed to the top lid by means of 3 pins.</li><li>Polyamide "door ring" joint to the door by means of four screws. This ring rotates concentrically to the "lid ring" allowing the door to slide from right to the left.</li><li>Steel seamless one-piece door, 1 mm thick, white epoxy finish. The door includes a crack helping to open the door.</li><li>Steel seamless one-piece basis, 1 mm thick. Welded to the body. It includes a teeth opening for the paper.</li><li>High density polyethylene ring placed over the basis with a slot to put out the paper.</li><li>Optional lock system with standard mediclinics® key.</li></ul>		
<b>Operation</b> <p>Pull the paper at your own convenience. Cut the paper using the teeth opening.</p> <p>For loading: Remove core from roll. Pull out a short length of the wiper. Put the towel in the dispenser.</p> <p>Check out that the pull out towel length is hanging clear in the base slot. Firmly close the door.</p>		

Note: