

# Acme Sanitary Ware Co. Ltd.

1/F, Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 Email: acme@acmesanitary.com.hk Since 1949 Website: www.acmesanitary.com.hk



PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

# SANITARY WARE SPECIFICATION SHEET

Item Descriptions Koala Kare (USA) Horizontal surface-mounted polyethylene baby changing station with 304

brushed stainless steel finish veneer

Model KB300-01SS

Colour Grey

304 Brushed Stainless Steel Finish

Material Polyethylene

Manufacturer Koala Kare (USA)

Supplier Acme Sanitary Ware Co. Ltd

Mr. Eric Wong/ Mr. Don Yuen

Contact Tel/Fax (852) 2388-7171 / (852) 2710-8012

E-mail acme@acmesanitary.com.hk Website www.acmesanitary.com.hk

#### MATERIALS:

Injection-molded polypropylene with Microban® antimicrobial additive embedded into the bed surface. Type 304 brushed stainless steel finish veneer. Reinforced steel-on-steel hinge mechanism and metal mounting chassis with mounting hardware included. Labeled usage instructions and safety messages in four languages. Optional Braille label available. Contoured changing surface area is 535 sq. in (3452 sq. cm) and comes complete with impervious TPU safety strap and solid stainless steel external bag hook. Dual cavity liner dispenser holds approximately 50 KB150-99 bed liners.


This Baby Changing Station has been tested to support 200 lbs with minimal deflection. Please note: This product is designed for infants only, up to 3.5 years of age and weighing less than 50 lbs.

#### OPERATION:

Concealed pneumatic cylinder and metal mounting chassis provides controlled, slow opening and closing of bed. Polypropylene is easy to clean and resists odors and bacterial growth. Complies with ASTM static load performance requirements when properly installed. Internal liner dispenser with integrated spring tab dispensed one liner at a time.

Warning: To ensure that the unit supports the intended loads, baby changing stations must be properly installed according to the manufacturer's instructions



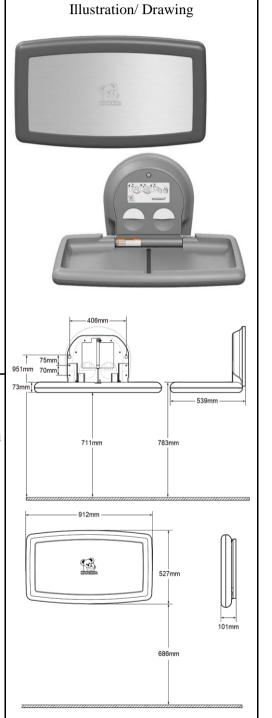


▶ YouTube (Installation Video) https://www.youtube.com/watch?v=e3LNSSbL2E8



# KB300 Installation Instructions

## Step 1:

- Inspect contents and remove changing station from the shipping container and check for any freight damage.
   If damage is found, please call Koala Kare Products' Customer Service at 888.733.3456.
- · Identify the best location for installing the unit.

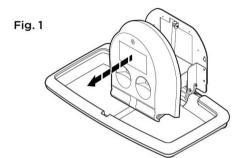

# Step 2:


- Remove the bed and chassis from the box. Open the main unit by pulling up on the frame and remove the plastic liner dispenser. Set it to one side. Fig. 1
- Make sure you have taken into consideration the operating clearance of 9 3/8" (238mm) on both sides of the exposed chassis and 21 1/8" (537mm) from wall surface when open.

#### For Wood Stud Wall


- Measure from the floor 37 7/16" (951mm) on stud center and mark the wall. The mounting holes are designed for 16" (406mm) stud centers. Ensure the locations you have marked for the mounting holes are level before drilling.
   Fig. 2 Drill pilot holes for keyhole mounting using a 1/8" regular drill bit.
- If the wall has wooden studs that are not on 16"
   (406mm) centers, you will need to use toggles to secure
   one side of the unit. The other side should be secured
   to the stud using the screws provided. You must allow
   for space inside the wall for the toggles to turn. This will
   vary depending on the toggles used.



• Use a 7/32" (5mm) masonry drill bit for the pilot hole until you hit the stud. Change bit to 1/8" (3mm) regular drill bit.



 If the wall has metal studs or an underlying surface of concrete block, you will need to use toggles to secure one side of the unit. The other side should be secured to the stud using the screws provided. You must allow for space inside the wall for the toggles to turn. This will vary depending on the toggles used.

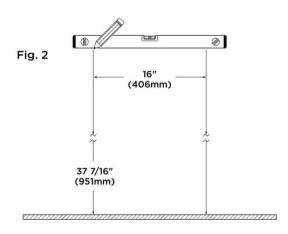



<sup>\*</sup>Diagrams are not to scale.





# KB300


# **Installation Instructions**

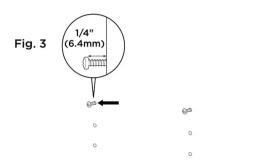

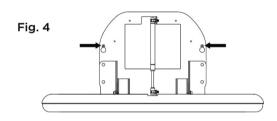

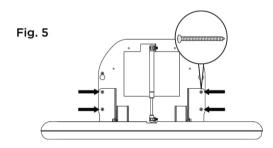

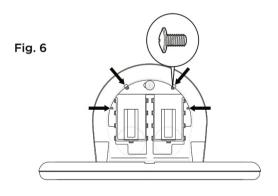

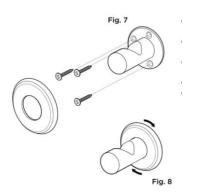

## Step 3:

- Mount bed and chassis by screwing two of the mounting screws into the pilot holes leaving 1/4" (6.4mm) exposed to allow keyhole slots to be easily mounted over the screw heads. Fig. 3
- · Place chassis over screws. Fig. 4
- After securing the unit using the keyhole slots, verify that the unit is level. Tighten top two screws so that they are flush with the wall.
- Use the four lower holes as a guide to mark and drill pilot holes. Use remaining four screws and four washers to complete installation of bed and mounting bracket.
   Insert washers over lower four screws. Fig. 5
- All six screws and four washers must be properly mounted to the chassis.

# Step 4:

- To install liner dispenser ensure liner dispenser is free from damage. Remove key, unlock, and open liner dispenser lid. This will expose liner dispenser mounting holes.
- Line up dispenser mounting holes onto chassis and secure with the four screws provided. **Fig. 6** Close and lock the liner dispenser door.

# Step 5:

 Clean work area and inspect unit to ensure it opens and closes smoothly.

## Step 6:

- To install the bag hook, measure up 44" (1118mm) from finished floor in the desired location and mark the wall.
- Position the bag hook on the wall so that the top of the mounting plate is level with the 44" (1118mm) mark.
- Position the bag hook over a wall stud for optimal strength.
- · Mark then predrill the mounting holes. Fig .7
- Use the provided screws to secure the bag hook in position, then take the escutcheon plate and screw it over the mounting plate to cover the mounting screws.
   Fig. 8