

Acme Building, 22-28 Nanking Street, Kow Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



PROJECT	REF	REV	ITEM CODE	
LOCATION	DATE		PAGE	

SANITARY WARE SPECIFICATION SHEET

Item Descriptions Stern (Israel) "Extreme CS" Chrome plated wall-mounted sensor faucet in 9V DC Supply with IP67 waterproof battery box Dimensions 195 mm Long Model Extreme CS B Code Number 237801 Finish Chrome Plated Supplier Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen Contact Tel/Fax (852) 2388-7171 / (852) 2710-8012 E-mail acme@acmesanitary.com.hk Website www.acmesanitary.com.hk

EXTREME CS B Ref # 237801

Touch-free wall-mounted electronic faucet. For cold or premixed water. Activated by concealed sensor built into the spout. Chrome plated body, other finishes available. Includes a low battery indicator. The Adjustable settings by remote control: sensor range, security time, delay in, delay out, on-off and resert to factory settings.

Application:


Wall-mounted faucet. Combines a minimalistic design with vandal resistant features. Helps washrooms stay clean and saves water. Ease installation. Long lasting even in the harshest installation sites. Ideal for shopping malls, sport facilities and entertainment centers.

Use:

With Proximity sensor: The faucet will automatically activate when users place their hands in the sensor range and will stop once the users remove their hands.

With Wave on-off sensor: The faucet will activate for an 8-second flow time when users place their hands in close proximity to the sensor. Removing the hands stops the faucet operation. Flow time is adjustable on site.

	PRODUC	T AT A GLANCE			
Installation	Duct Concelead				
Power Supply Options	•IP67 Dual power input box with a 9V battery • 9V Transformer				
Operating pressure	0.5 - 8.0 BAR (7 - 116 PSI). With a pressure over 8 bar, use a pressure reducing valve.				
Water supply	Cold or premixed water				
Flow time	8 seconds. Adjustable with the Stern remote control				
Water Saving options	4 LPM / 1.0 GPM - PCA spray				
Water temperature	70°C Maximum				
Security Time	Auto shutoff after 90 seconds. adjustable by remote control				
	ORDERING	INFORMATION			
MODEL	CODE	POWER			
Extreme CS WM E	237800	IP67 Dual power input box with a 9V batter			
Extreme CS WM B	237801	9V battery			

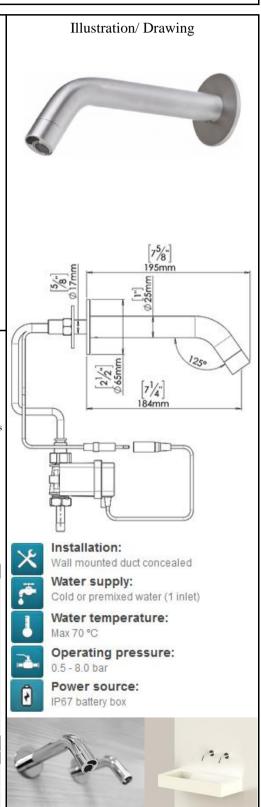


^{*} All information of the above is for the reference only. No prior notice is made if any changes.



Tel: 2388 7171 Fax: 2710 8012
E-mail: acme@acmesanitary.com.hk
Website: www. acmesanitaryware.com.hk



SPARE PARTS LIST

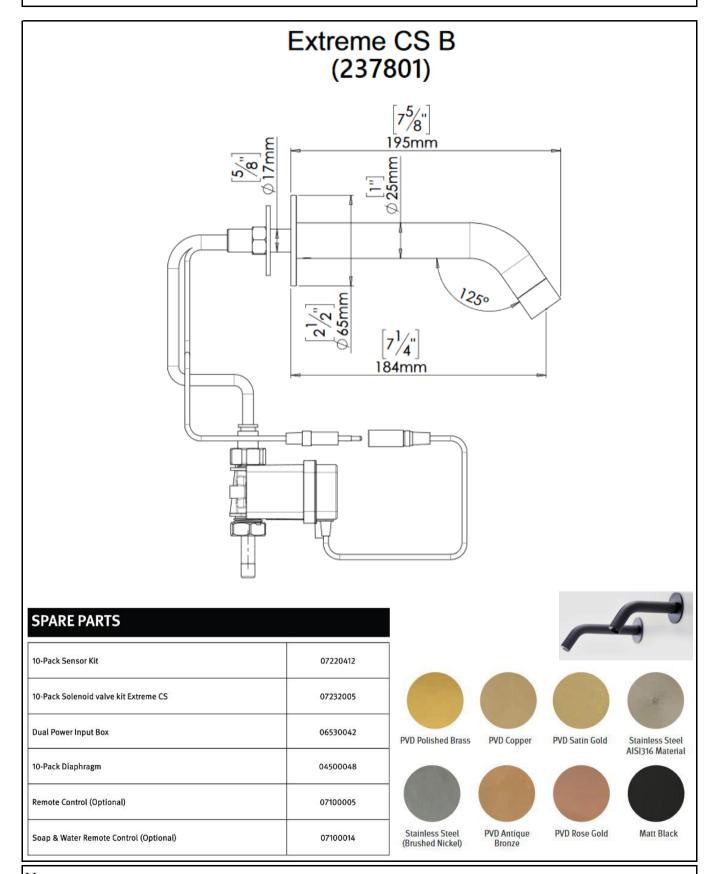

Note: In order to locate the relevant spare part, please check the corresponding parts and part mumber in the drawing. Minimum order quantity will be required.

^{*} All information of the above is for the reference only. No prior notice is made if any changes.



48/F, Immigration Tower, 7 Gloucester Road, Wan Chai, Hong Kong

本署檔號 Our ref. 來函檔號

Your ref.

(5) in WSD 3321/2020 T/J(778/2020)

電話

Tel.

傳真 Fax

: 2824 0578

11 August 2020

Approval of "STERN" Sensor Taps (General Acceptance No. C20200659)

Your letter ref. BE/L20402/20 dated 23 June 2020 and subsequent clarification by email up to 3 August 2020 refer.

Having considered the test report ref. J25247Arl issued on 16 July 2020 by Nutek Systems (HK) Ltd. and WRAS certificate, this Authority accepts that the fittings described below comply with, and their use when correctly installed does not contravene, the Waterworks Ordinance and Regulations.

Name of Manufacturer:

Y Stern Engineering (1989) Ltd

Country of Origin:

Israel

Brand:

Stern

Details of Fittings:

1/2" Wall mounted sensor tap with 1 no. of flexible hose

approved by UK's WRAS under ref. 1704079

Model:

237801 and 237800

Body Markings:

Stern

Expiry Date:

30 April 2022





This Authority hereby permits the use of the above fittings in fresh water plumbing systems subject to full adherence to Waterworks installation requirements. In particular, you are required to draw your customers' attention to the following requirement-

"A stop cock or gate valve must be installed at the upstream of the fittings for manual isolation of water supply." AND

"The main voltage operated sensor valve should comply with the electricity safety regulation for applications in bathroom, toilet etc."

A condition of this acceptance is that the fittings to be installed shall be replicas of the samples as certified by the testing agent mentioned above and without modifications. This acceptance may be withdrawn at any time if the standard of the fittings installed fails to meet that of the approved samples or if the fittings are found to be unsuitable for use in fresh water plumbing systems.

This acceptance is only applicable to the main body of the fittings, unless otherwise specified.

For the use of the fittings in any project, the General Acceptance Number of this letter must be quoted as a means of identification of acceptance of the fittings by this Authority.

Should you have any enquiries, please contact our Engineer Mr. Terry KUNG at tel. no. 3583 4086.

Yours faithfully,

(CHAN Chung-kun)

for Director of Water Supplies

Encl.

c.c. WSD 3321/1/82] - without catalogue ME/MC] - with soft copy only





Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



INSTALLATION

EXTREME CS E/B

Note: Prior to installation flush water lines.

STEP 1 - INSTALLING THE FAUCET


1): Shut off the water supply.



Drill a hole (18 to 20 mm) in the location you wish to install the faucet.



Insert the faucet base through the wall and fix it firmly on the opposite side with the hexagonal nut and the disk.

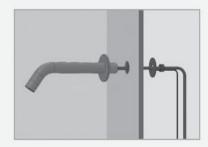

Acme Sanitary Ware Co Ltd




Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



INSTALLATION

STEP 2 - CONNECTING THE WATER SUPPLY

- Remove the plastic tip that is inserted in the end of the black flexible tube.
- Connect the dual power box to the water supply lines.
- Connect the black flexible tube to the quick connector on the top of the dual power box.
- Place battery into the Dual Power input box.

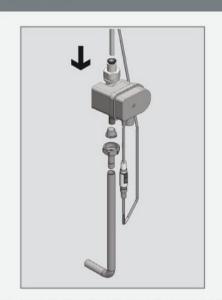

STEP 3 – CONNECTING THE POWER SOURCE

- Turn on the central water supply. Check for leaks.
 Remove the protective sticker from the sensor.
- 2) Connect the power source.
 - Once the power source is connected, wait 15 seconds to allow the system to set the ideal sensor range. A LED will flash continously to indicate this adjustment period. The solenoid valve will open for 1 second to indicate that the ideal sensor range was set.



If the automatically adjusted sensor range is not satisfactory to your purposes, please refer to the section entitled "Settings adjustment".

Acme Sanitary Ware Co Ltd



Acme Building, 22-28 Nanking Street, Kowloon, Hong Kong Tel: 2388 7171 Fax: 2710 8012 E-mail: acme@acmesanitary.com.hk Website: www. acmesanitaryware.com.hk



TROUBLESHOOTING

PROBLEM	INDICATOR	CAUSE	SOLUTION	
No water is coming out of the faucet:	1. LED light in the sensor does not flash once when user's hands are within the sensor's range.	1. Range is too short.	Increase the range	
		2. Range is too long.	Decrease the range	
		3. Unit is in "Security Mode"*		
		4. Sensor is picking up reflections from the washbasin or another object.	Eliminate the cause of reflection.	
	2. LED light in the sensor flashes once when user's hands are within the sensor's range.	1. Debris or scale in solenoid.	Unscrew solenoid, pull out the plunger and the spring from the solenoid and clean them. Use scale remover material if needed. When replacing the plunger, please make sure that the spring is in vertical position.	
		2. The central orifice in the diaphragm is plugged or the diaphragm is torn	Clean the orifice or replace the diaphragm.	
		3. The water supply pressure is higher than 8 bar.	Reduce the supply water pressure.	
		4. The water supply pressure is under 8 bars and yet the pressure in the faucet's body is higher. This situation could be caused by a sudden increase in the water supply pressure that the backcheck prevents from dropping, even after water supply pressure drops under 8 bars.	Shut off the water supply and unscrew one of the flexible pipes in order to reduce the pressure that blocks the product.	
Water flow from spout does not stop:	1. Sensor flashes once when user's hands are within the sensor's range.	1. Debris or scale in diaphragm	Clean the orifice or replace the diaphragm.	
		Connectors between the electronic unit and the Dual power input box are disconnected or not connected properly	Connect the connectors properly. <i>Refer to page 11</i> .	
	2. LED light in the sensor does not flash once when user's hands are within the sensor's range.	1. Sensor is dirty or covered.	Clean or eliminate the cause of interference.	
		2. Sensor is picking up reflections from the washbasin or another object.	Decrease the range or eliminate the cause of reflection.	
Water flow diminished		Filter or aerator is clogged	Remove, clean, re-install the filter or aerator	

^{* &}quot;Security Mode": If the sensor is covered for more than 90 sec. the faucet will automatically shut off water flow. To return to normal operation remove any blockage to re-establish operation.