



| | | | | | | |
|----------|--|------|--|-----|-----------|--|
| PROJECT | | REF | | REV | ITEM CODE | |
| LOCATION | | DATE | | | PAGE | |


SANITARY WARE SPECIFICATION SHEET

| | | |
|--------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|
| Item Descriptions | Stern (Israel) "Ever AISI316" Stainless steel AISI316 deck mounted sensor faucet in 6x1.5AA DC Supply with IP67 waterproof battery box | Illustration/ Drawing |
| Model | Ever Battery AISI316 | |
| Code Number | 230030 | |
| Finish | Stainless Steel AISI316 | |
| Supplier | Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Wilson Hung | |
| Contact Tel/Fax E-mail Website | (852) 2388-7171 / (852) 2710-8012 acme@acmesanitary.com.hk www.acmesanitary.com.hk | |

EVER BATTERY AISI316 Ref # 230030
 Touch-free electronic faucet for deck-mounted installations. Activated by infrared sensor. For hot or premixed water. Filters included. Stainless Steel AISI316 body, other finishes available. Battery version includes a low battery indicator. Adjustable setting by remote control : sensor range, security time, delay in, delay out, on-off and reset to factory setting. 24 hours mandatory hygiene flush available upon request.

Application:
 Deck-mounted faucet. Combining an elegant minimalist design with anti-vandal features. Easy installation. Long lasting even in the harshest installation sites. Helps washrooms to stay clean and saves water. Prevents cross contamination. Ideal for stadiums, train and bus stations and highway rest stop.

Use:
 Touch-free electronic faucet. The faucet is activated automatically when users place their hands n the sensor range and stops when the users remove their hands.

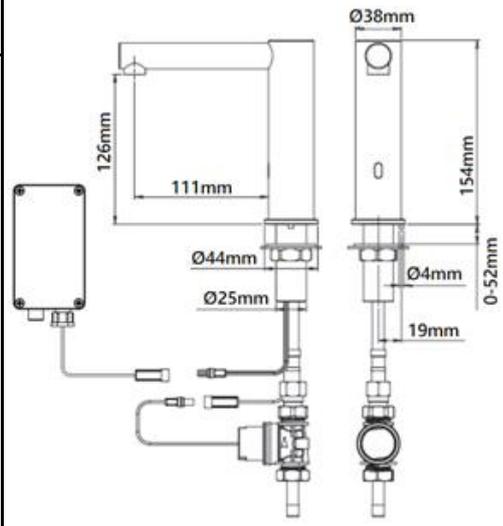

| PRODUCT AT A GLANCE | |
|----------------------|-------------------------------------------------------------|
| Installation | Deck-mounted |
| Power Supply | • 6X1.5V batteries • 9V transformer |
| Operating pressure | 0.5-8.0 bAR / 7.0-116.0 PSI |
| Water supply | Cold or premixed water |
| Water Saving Options | 5 LPM / 1.32 GPM ;1.89 LPM / 0.5 GPM |
| Water temperature | 70°C Maximum |
| Security Time | Auto shutoff after 90 seconds. adjustable by remote control |

- Installation:**
Lavatory mounted
- Water supply:**
Cold or premixed water (1 inlet)
- Water temperature:**
Max 70 °C
- Operating pressure:**
0.5 - 8.0 bar
- Power source:**
IP67 battery box

| ORDERING INFORMATION | | | OPTIONS | |
|----------------------|--------|------------------|----------------------------------|----------|
| MODEL | CODE | POWER | OPTION | CODE |
| EVER BATTERY | 230010 | 6X1.5V batteries | Remote control | 07100014 |
| EVER MAINS | 230000 | 9V transformer | Matching EVER SD BATTERY | 230910 |
| EVER BATTERY AISI316 | 230030 | 6X1.5V batteries | Matching EVER SD MAINS | 230900 |
| EVER MAINS AISI316 | 230020 | 9V transformer | Matching EVER SD BATTERY AISI316 | 230930 |
| | | | Matching EVER SD MAINS AISI316 | 230920 |




* All information of the above is for the reference only. No prior notice is made if any changes.



SPARE PARTS LIST

Ever Battery AISI316 (230030)

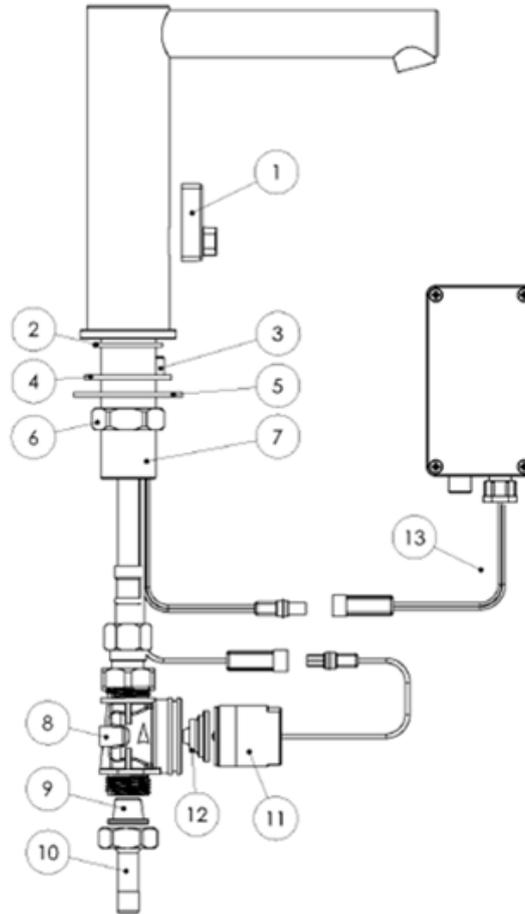

| Quantity | Part Number | Description | Cat. No. |
|----------|-------------|---------------------------------------|-----------------|
| - | - | Seals and Screws Kit | 07210175 |
| 1 | 2 | O-ring | |
| 1 | 4 | Gasket | |
| 1 | 3 | Screw | |
| - | - | 10-Pack Sensor Kit | 07220387 |
| - | - | VR Brass SD Kit | 07246036 |
| 1 | 3 | Screw | |
| 1 | 7 | Insert | |
| 1 | 4 | Gasket | |
| 1 | 5 | Disk | |
| 1 | 6 | Hexagon nut | |
| - | - | 8-Pack Solenoid BS-Housing Kit | 07221119 |
| 1 | 8 | Solenoid valve's body | |
| 1 | 9 | Filter | |
| 1 | 10 | Nipple | |
| - | - | 10-Pack Solenoid Valve Kit | 07232000 |
| 1 | 11 | Solenoid valve | |
| 1 | 12 | Diaphragm | |
| | 12 | 10-Pack Diaphragm | 04500048 |
| | 13 | IP 67 Battery Box | 06530020 |


Note: In order to locate the relevant spare part, please check the corresponding parts and part number in the drawing. Minimum order quantity will be required.

** All information of the above is for the reference only. No prior notice is made if any changes.*


INSTALLATION

STEP 1 – PREPARATION FOR MOUNTING THE FAUCET

1 Shut off the water supply.

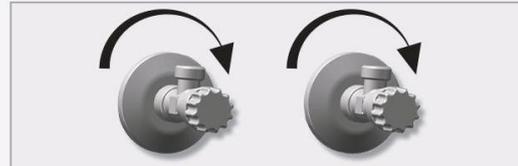


2 Remove the hexagonal nut, the disk and the gasket. Do not remove the O-ring from the base of the faucet.

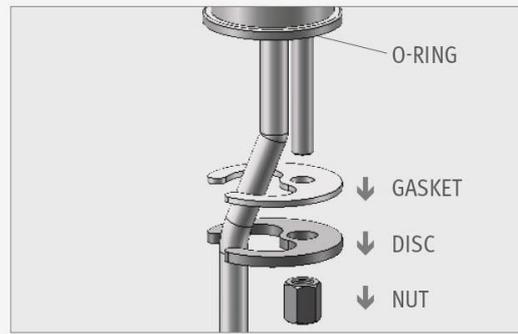


STEP 2 – INSTALLING THE FAUCET

1 Place the faucet with O-ring into the hole in deck or lavatory. Make sure the O-ring is located between the deck or lavatory and the bottom of the faucet.

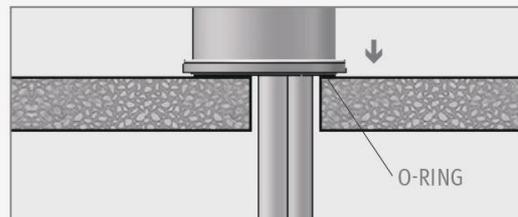

2 Slide the gasket, disk and hexagonal nut over the flexible hose and secure the faucet into place.

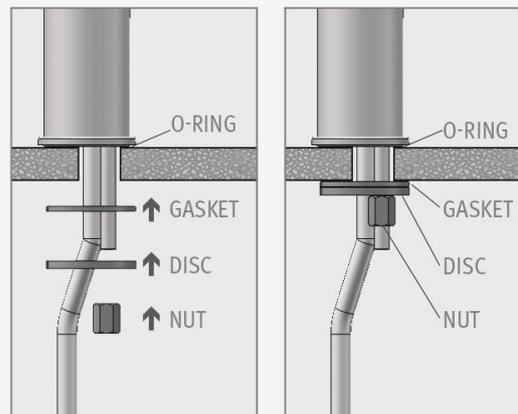

INSTALLATION

STEP 3 – CONNECTING THE WATER SUPPLY

1

Connect the flexible pipe to the water supply.


For models with temperature control connect the red flexible pipe to the hot water supply and the blue flexible pipe to the cold water supply.



MAKE SURE THAT THE FILTER(S) IS/ARE INSTALLED BETWEEN THE FLEXIBLE PIPE AND THE SHUT OFF VALVE (ANGLE VALVE) (NOT SUPPLIED).

2

Turn on the central water supply and the shut-off valves (angle valves) and check for leaks.

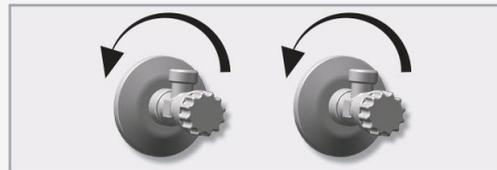




INSTALLATION

STEP 4 – CONNECTING THE POWER SOURCE

BATTERY VERSION

Install the battery box at the wall underneath the sink using the two sided adhesive foam tape. The cable connection must point down. (You can use an optional extension cable in order to assemble the battery box up to 10ft. away from the sink.)

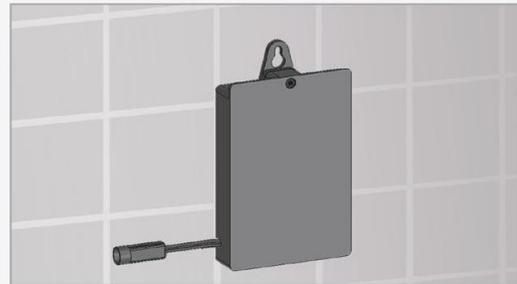

1

TRANSFORMER VERSION

Plug the transformer into the electricity socket and connect the connectors.



2

In order to avoid entering into the adjusting mode, wait 10 seconds before operating the faucet. If the range is unsatisfactory, refer to the section titled “settings adjustment.



ABOUT
10
SECONDS

NOTE: This model includes a special aerator that allows you to adjust the water stream direction on site in order to prevent water splashing if needed. To change the angle of the water stream, simply move the adjustable tilting plate by pressing it smoothly.

ATTENTION! the aerator is tightened to prevent removal by hand.





TROUBLESHOOTING

| PROBLEM | INDICATOR | CAUSE | SOLUTION |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No water coming out of the faucet: | 1. Sensor flashes continuously when user's hands are within the sensor's range. | Low battery. | Replace battery |
| | 2. LED in the sensor does not flash once when user's hands are within the sensor's range. | 1. Range is too short. | Increase the range |
| | | 2. Range is too long. | Decrease the range |
| | | 3. Battery is completely used up | The battery must be replaced. |
| | 3. LED in the sensor flashes once when user's hands are within the sensor's range. | 4. Unit is in "Security Mode"* | |
| 5. Sensor is picking up reflections from the washbasin or another object. | | Eliminate cause of reflection. | |
| 1. Connectors between the electronic unit and solenoid are disconnected. | | | Connect the electronic unit connectors to the solenoid. |
| | | 2. Debris or scale in solenoid. | Unscrew solenoid, pull out the plunger and the spring from the solenoid and clean them. Use scale remover material if needed. When replacing the plunger, please make sure that the spring is in vertical position. |
| | | 3. The central orifice in the diaphragm is plugged or the diaphragm is torn | Clean the orifice or replace diaphragm. |
| | 4. The water supply pressure is higher than 8 bar. | Reduce the supply water pressure. | |
| 5. The water supply pressure is under 8 bars and yet the pressure in the faucet's body is higher. This situation could be caused by a sudden increase in the water supply pressure that the back check prevents from dropping, even after water supply pressure drops under 8 bars. | | Shut off water supply and unscrew one of the flexible pipes in order to reduce the pressure that blocks the product. | |
| | | | |
| Water flow from spout does not stop: | 1. Sensor flashes once when user's hands are within the sensor's range. | Debris or scale in diaphragm | Clean the orifice or replace diaphragm. |
| | 2. LED in the sensor does not flash once when user's hands are within the sensor's range. | 1. Sensor is dirty or covered.** | Clean or eliminate case of interference. |
| | | 2. Sensor is picking up reflections from the washbasin or another object. | Decrease the range or eliminate cause of reflection. |
| Water flow diminished | | Filter or aerator is clogged | Remove, clean, re-install |

* "Security Mode": If the sensor is covered for more than 90 sec. the faucet will automatically shut off water flow. To return to normal operation remove any blockage.

** In this case, the water flow will stop anyway after 90 seconds because of the security time.