



PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

# SANITARY WARE SPECIFICATION SHEET

Item Descriptions	Stern (Israel) "D28 L AISI316" Stainless steel AISI316 wall mounted sensor faucet extended body in AC Supply with 5m wire AC 110-240 Vac 50/60Hz to 9V 0.3A <b>IP68 waterproof switching transformers</b>	<p>Illustration/ Drawing</p>
Dimensions	275 mm Long	
Model	D28 LE AISI316	
Code Number	352125	
Finish	Stainless Steel AISI316	
Supplier	Acme Sanitary Ware Co. Ltd Mr. Eric Wong/ Mr. Don Yuen	
Contact Tel/Fax	(852) 2388-7171 / (852) 2710-8012	
E-mail Website	acme@acmesanitary.com.hk www.acmesanitary.com.hk	

**D28 LE AISI316**  
**Ref # 352125**

Touch-free wall-mounted electronic faucet. Activated by an infrared sensor. Long spout version. For cold or premixed water. Stainless Steel AISI316 body, other finishes available. Adjustable settings by remote control: sensor range, security time, delay in, delay out, on-off and reset to factory settings.

**Application:**

Wall-mounted faucet. Combines a minimalistic design with vandal resistant features. Helps washrooms stay clean and saves water. Easy installation. Long lasting even in the harshest installation sites. Ideal for shopping malls, sport facilities and entertainment centers.

**Use:**

The faucet will automatically activate when users place their hands in the sensor range and will stop once the users remove their hands.

**PRODUCT AT A GLANCE**

Installation	Concealed wall-mounted
Power Supply	• 9V battery • 9V Transformer
Operating pressure	0.5-8.0 bar / 7.0-116.0 PSI. For pressure over 8 bar use a pressure reducing valve
Water supply	Cold or premixed water
Water Saving Options	5 LPM / 1.32 GPM ; 1.89 LPM / 0.5 GPM
Water temperature	70°C Maximum
Security Time	90 seconds. Adjustable by remote control

**ORDERING INFORMATION**

MODEL	CODE	POWER	ADDITIONAL SPECIFICATIONS
D28 LB	352010	9V battery	Long spout 275 mm / 10.82"
D28 LE	352110	9V transformer	
D28 LB AISI316	352015	9V battery	
D28 LE AISI316	352125	9V transformer	



**Installation:**

Wall mounted duct concealed



**Water supply:**

Cold or premixed water (1 inlet)



**Water temperature:**

Max. 70 °C



**Operating pressure:**

0.5 - 8.0 bar



**Power source:**

9V Transformer



\* All information of the above is for the reference only. No prior notice is made if any changes.



Department

入境事務大樓 48 樓  
48/F, Immigration Tower, 7 Gloucester Road, Wan Chai, Hong Kong

本署檔號 : (6) in WSD 3321/2020 T/J(105/2020)  
Our ref.  
來函檔號 :  
Your ref.

電話 :  
Tel.  
傳真 : 2824 0578  
Fax.

11 September 2020

Dear Sir/Madam,

### Approval of "STERN" Sensor Taps (General Acceptance No. B20200069)

Your letter ref. L001/2020 dated 13 January 2020 and subsequent submissions received by this department up to 5 August 2020 refer.

It is noted that the fittings described below have been accepted by the United Kingdom Water Regulations Advisory Scheme (WRAS) to have complied with the requirements of the United Kingdom Water Supply (Water Fitting) Regulations / Scottish Water Byelaws when correctly installed. This Authority accepts that the fittings described below based on the WRAS certificate and test reports ref. J25300A-3AC and J25300A-3r1 both issued on 23 July 2020 by Nutek Systems (HK) Limited comply with, and their use when correctly installed does not contravene, the Waterworks Ordinance and Regulations.

**Name of Manufacturer:** Y Stern Engineering (1989) Ltd

**Country of Origin:** Israel

**Brand:** Stern

**Details of Fittings:** Range of wall mounted, single hole, single outlet (fixed) electronically controlled tap assemblies (stainless steel bodies). The flow is controlled by a solenoid valve activated via an infra-red sensor. 1 no. of flexible hose included and under WRAS approval no. 2005316.



Maximum working pressure 8.0 bar. Maximum operating temperature 60°C.

**Model:** D28LBAISI316 and D28LEAISI316

**Size:** 10mm spigot

**Body Markings:** *Stem* on head of spout

**WRAS Approval Number:** 1709048

**Installation Requirements:** R001, R007, R040

**Expiry Date:** 30 September 2022

In view of the acceptance by WRAS, this Authority has no objection to the use of the said fittings in fresh water plumbing systems subject to full adherence to Waterworks installation requirements. In particular, you are required to draw your customers' attention to the following installation requirements –

“Installation shall comply with the ‘Installation Requirements & Notes’ of the WRAS’s approval letter concerned.”

“A stop cock or gate valve must be installed at the upstream of the fittings for manual isolation of water supply.” AND

“The main voltage operated sensor valve should comply with the electricity safety regulation for applications in bathroom, toilet etc.”

A condition of this acceptance is that the fittings to be installed should be replicas of the samples certified by WRAS and no modification should be made to the fittings. This acceptance may be withdrawn at any time if the standard of the fittings installed fail to meet that of the approved samples or if the fittings are found to be unsuitable for use in fresh water plumbing systems.

This acceptance is only applicable to the main body of the fittings, unless otherwise specified.

For the use of the fittings in any project, the General Acceptance Number of this letter must be quoted as a means of identification of acceptance of the fittings by this Authority.

Should you have any enquiries, please contact our Engineer Mr. Terry KUNG at tel. no. 3583 4086.

Yours faithfully,



(CHAN Chung-kun)

for Director of Water Supplies

Encl.

c.c.      WSD 3321/1/82 ] - without catalogue  
            ME/MC        ] - with soft copy only



PROJECT		REF		REV	ITEM CODE	
LOCATION		DATE			PAGE	

## SPARE PARTS LIST

**D28 LE AISI316  
(352125)**

Quantity	Part Number	Description	Cat. No.
	-	<b>Screws Kit</b>	<b>07210101</b>
2	2	Screw	
1	4	Screw	
1	5	Screw	
<b>1</b>		<b>Nano Sensor</b>	<b>08004001</b>
	-	<b>Solenoid BS-Housing Kit</b>	<b>07231008</b>
1	7	Solenoid valve's body	
1	8	Filter	
1	9	Nipple	
	-	<b>Solenoid Valve Kit</b>	<b>07230017</b>
1	11	Solenoid valve	
1	10	Diaphragm	
	<b>10</b>	<b>Diaphragm</b>	<b>04500001</b>
	<b>6</b>	<b>Transformer</b>	<b>TBC</b>

**Note:** In order to locate the relevant spare part, please check the corresponding parts and part number in the drawing. Minimum order quantity will be required.

*\* All information of the above is for the reference only. No prior notice is made if any changes.*




## INSTALLATION

D28E

### STEP 1 - INSTALLING THE FAUCET

1. Shut off the water supply
2. Drill a hole (26 to 27 mm) at the place where you want to install the faucet spout.
3. Your model includes an optional anti-rotation pin. Drill a small hole just above the previous one for the anti-rotation pin.

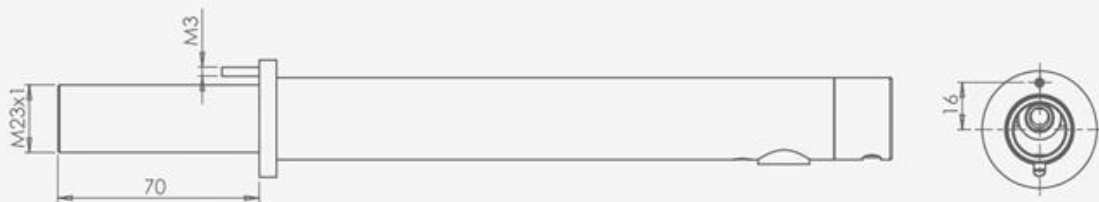

4. Insert the faucet and its attachments through the wall. The aerator in the faucet spout must face the washbasin.
5. Insert the anti-rotation pin into the small hole (if needed)
6. Fix the base behind the wall with the hexagonal nut and the disk.


### STEP 2 - CONNECTING THE WATER SUPPLY

1. Fit the flexible pipe coming from the faucet base to the solenoid valve housing.
2. Fit the water supply inlet to the inlet nipple at the solenoid valve housing.

**Note:** Make sure the filter is located at the solenoid inlet.

3. Connect the cable coming from the electronic unit to the solenoid valve.


**Important:** The faucet was supplied with a self adjusting sensor. The ideal sensor range for the specific location will be set automatically.

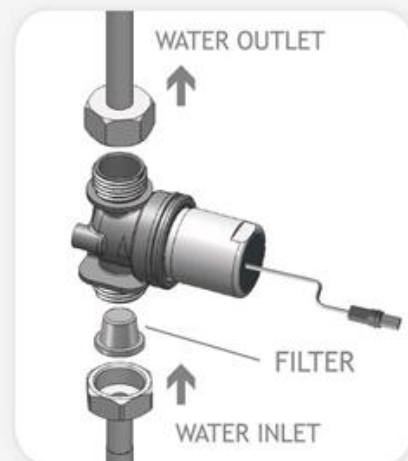




## INSTALLATION

D28E

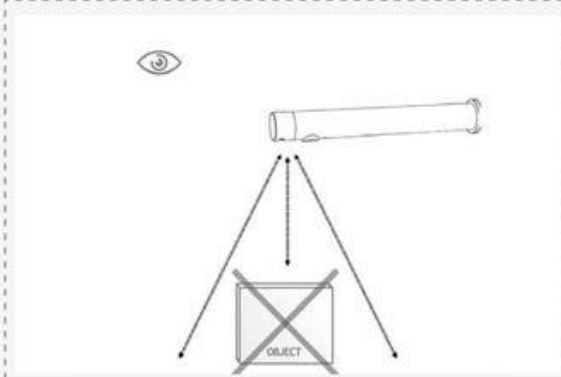

Before proceeding to step 3 check that no objects are in front of the sensor besides the washbasin.

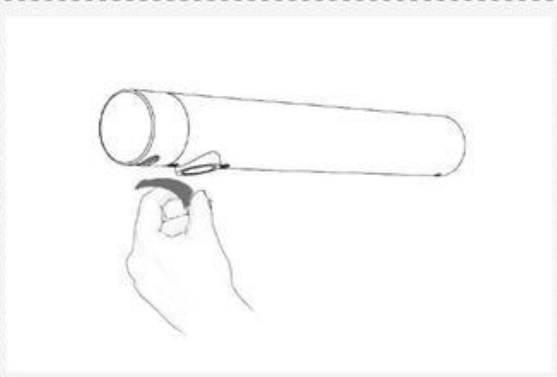

Now, remove the protecting sticker that covers the sensor.

### STEP 3 – CONNECTING THE POWER SOURCE

1. For D28: Connect the other cable coming from the electronic unit at the D28 base to the battery box.
2. For D28 E: Connect the other cable coming from the electronic unit at the D28 base to the transformer. Plug the transformer into the electricity socket.

3. After you have connected the power source (battery or transformer) wait 15 seconds in order to allow the system to set the ideal sensor range. As an indication that the self adjusting is taking place, a LED in the sensor eye will flash continuously. **The solenoid valve will be opened and closed for 1 second as an indication that the ideal sensor range was set and the product is ready for use.**



4. Turn on the central water supply. Check for leaks.
5. If the automatically adjusted sensor range is not satisfactory, please refer to the section entitled "Settings adjustment".



## TROUBLESHOOTING

PROBLEM	INDICATOR	CAUSE	SOLUTION
No water is coming out of the faucet:	1. LED in the sensor does not flash once when user's hands are within the sensor's range.	1. Range is too short.	Increase the range
		2. Range is too long.	Decrease the range
		3. Unit is in "Security Mode"*	
		4. Sensor is picking up reflections from the washbasin or another object.	Eliminate the cause of reflection.
	2. LED in the sensor flashes once when user's hands are within the sensor's range.	1. Debris or scale in solenoid.	Unscrew solenoid, pull out the plunger and the spring from the solenoid and clean them. Use scale remover material if needed. When replacing the plunger, please make sure that the spring is in vertical position.
		2. The central orifice in the diaphragm is plugged or the diaphragm is torn	Clean the orifice or replace the diaphragm.
		3. The water supply pressure is higher than 8 bar.	Reduce the supply water pressure.
		4. The water supply pressure is under 8 bars and yet the pressure in the faucet's body is higher. This situation could be caused by a sudden increase in the water supply pressure that the backcheck prevents from dropping, even after water supply pressure drops under 8 bars.	Shut off the water supply and unscrew one of the flexible pipes in order to reduce the pressure that blocks the product.
Water flow from spout does not stop:	1. Sensor flashes once when user's hands are within the sensor's range.	1. Debris or scale in diaphragm	Clean the orifice or replace the diaphragm.
		2. Connectors between the electronic unit and the Dual power input box are disconnected or not connected properly	Connect the connectors properly. <i>Refer to page 11.</i>
	2. LED in the sensor does not flash once when user's hands are within the sensor's range.	1. Sensor is dirty or covered.	Clean or eliminate the cause of interference.
		2. Sensor is picking up reflections from the washbasin or another object.	Decrease the range or eliminate the cause of reflection.
Water flow diminished		Filter or aerator is clogged	Remove, clean, re-install the filter or aerator

\* "Security Mode": If the sensor is covered for more than 90 sec. the faucet will automatically shut off water flow. To return to normal operation remove any blockage to re-establish operation.